 













 

 





























 
 






 

















Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Setup	 Setup / OPT /
 Power	 Power	 Display	 Display / Media
 VCR	 Shift + 4	 Title/PBC	 Sound / Title
 DVD	 Shift + 2	 Menu	 Menu / Home
 Input	 AV / Input / RDS	 Up	 Up
 1/Tracking-	 1	 PR+	 CH+ / Page+
 2	 2	 PR-	 CH- / Page-
 3/Tracking+	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Right	 Right
 6	 6	 OK/Enter	 OK
 7	 7	 Subtitle	 Subtitle / EQ
 8	 8	 Audio	 Audio / Lang I/II
 9	 9	 Search	 Red / Netflix / Search
 0	 0	 Zoom	 Zoom / Size
 System	 Smart / List	 <<	 << / Tune-
 Clear	 Exit / Cancel / Clear	 Pause	 Pause / Step / Freeze





Original	Replacement	Original	Replacement
 Play	 Play / Slow		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		
 Rec	 Rec / Rec Mode		
 Speed	 Picture / Format		
 Repeat	 Green / APP / Repeat		
 A-B	 Yellow / YouTube / Repeat		
 Tv/VCR	 TV/Radio /		
 3D	 Shift + 3		
 Mark	 Fav / Marker / PC		
 Angle	 Info / Angle		
 CM-Skip	 Guide / EPG / -/--		
 Replay	 Text / Goto		
 Last CH	 Back / Return		
 Program	 Shift + TV/Radio / Program		

