



Original	Replacement	Original	Replacement
Power	Power	Exit	Exit
Mute	Mute	Up/PR+	Up
1	1	Down/PR-	Down
2	2	Right	Right
3	3	Left	Left
4	4	OK/List	Ok
5	5	Vol+	Vol +
6	6	Vol-	Vol -
7	7	[ + ]	3D
8	8	UHF	HOME SMART
9	9	↑	+ CH
0	0	↓	CH -
Tv/Radio	SEARCH TV/R	FAV	FAV PRE-CH
←PR	RETURN BACK	PAL/NTSC	PICTURE FORMAT
EPG	- / - GUIDE	Red	Red
Menu	TOP MENU MENU	Green	Green
Info	DISPLAY INFO	Yellow	Yellow





Original		Replacement		Original		Replacement	
	Blue/Sound		Blue				
	Audio		Dual				
	TXT		Text				
	[...]		Subt				
	Pause		Pause				
	Tv/AV		AV				

