

 
 
 









 



 






Original	Replacement	Original	Replacement
	Power		Power
	CARD		Red
	USB		Green
	AUX		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	OSD/Info		Info
	Open/Close		Eject
	DVD		Smart
	Tuner		Media
	Prog		Shift + Sleep
	Clock		Shift + AV
	Timer		AV
	Sleep		Sleep
	Setup		Options
	Title		List
	Menu		Menu
	Up / Preset+		Up
	Down / Preset-		Down
	Right / >> / Tun+		>>
	Right / >> / Tun+		Right
	Left / << / Tun-		<<
	Left / << / Tun-		Left
	Enter / Play/Pause		Play
	Enter / Play/Pause		Pause





Original	Replacement
Enter / Play/Pause	Ok
Subtitle	Subt
Audio	Dual
Step	Shift + Pause
Slow	Shift + Play
Prev	I<<
Next	>>I
GOTO	Pre Ch
Stop	Stop
Repeat	Text
PBC/Bookmark	3D
Intro	D. Menu
Rand	TV/R
RDS/A-B	Exit
P-Scan	Back
ST/Mono	Shift + Dual
Zoom	Shift + Eject

Original	Replacement
Angle	Format
Mute	Mute
Demo	Shift + D. Menu
EQ	Ch -
Bass	Ch +
Vol-	Vol -
Vol+	Vol +

