 



 


 
 









 




 


 

 

 
 
 

 

 





















 


























Original	Replacement	Original	Replacement
 Power	 Power	 B4	 Rec / Rec Mode
 Guide	 Guide / EPG / -/--	 5	 5
 1	 1	 6	 6
 A1	 Shift + 1	 7	 7
 B1	 Play / Slow	 8	 8
 C1	 << / Tune-	 9	 9
 A2	 Shift + 2	 0	 0
 B2	 Pause / Step / Freeze	 List	 Smart / List
 C2	 >> / Tune+	 Q.View/Reveal	 Display / Media
 2	 2	 P:P	 Shift + Fav / Marker / PC
 C3	 I<< / Preset-	 [ +]/Info	 Info / Angle
 B3	 Stop / Hold	 S.Mode	 Sound / Title
 A3	 Shift + 3	 Nicam/Audio	 Audio / Lang I/II
 3	 3	 Hold	 Shift + Stop /
 A4	 Shift + 4	 Mix	 Shift + Text /
 C4	 >>I / Preset+	 Size	 Zoom / Size
 4	 4	 Radio	 TV/Radio /





Original		Replacement		Original		Replacement	
	Index		Shift + Info / Angle		FAV		Fav / Marker / PC
	Text		Text / Goto		Aspect		Picture / Format
	Subpage		Shift + Subtitle / EQ		Sleep		Sleep / Timer
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	Source		AV / Input / RDS		Green		Green / APP / Repeat
	Menu		Menu / Home		Yellow		Yellow / YouTube / Repeat
	Prog+		CH+ / Page+		Blue		Blue / Prime Video / Random
	Up		Up				
	Down		Down				
	Prog-		CH- / Page-				
	Left		Left				
	Vol-		Vol-				
	Vol+		Vol+				
	Right		Right				
	OK/Enter		OK				
	Exit		Exit / Cancel / Clear				
	Sub-T		Subtitle / EQ				

