



































Original	Replacement
 Standby	 Power
 USB/Card	 Shift + 8
 Open/Close	 Eject / Surround
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Search	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0/10	 0

Original	Replacement
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Display	 Display / Media
 Title	 Sound / Title
 Left	 Left
 Up	 Up
 Right	 Right
 Enter	 OK
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Vol+	 Vol+





Original	Replacement	
REPEAT	Repeat	Green / APP / Repeat
A-B	A-B	Yellow / YouTube / Repeat
ANGLE	Angle	Info / Angle
MUTE	Mute	Mute / Dimmer
-	Vol-	Vol-
L/R	L/R	AV / Input / RDS
N/P	N/P	Text / Goto
PBC	PBC	Smart / List
SLOW	Slow	+  Shift + Play /
V-MODE	V-Mode	D.Menu / Top
RETURN	Return	Back / Return
HD/Res.	HD/Res.	Picture / Format
PROGRAM	Program	TV/Radio /
ZOOM	Zoom	Zoom / Size

Original	Replacement

