 











 

 
 
 
 



 

 
 
 

 







 
 


 

 
 






 
 

 



 















| Original  | Replacement  |
|---|--|
|  On/Standby    |  Power        |
|  1             |  1            |
|  2             |  2            |
|  3             |  3            |
|  4             |  4            |
|  5             |  5            |
|  6             |  6            |
|  7             |  7            |
|  8             |  8            |
|  9             |  9            |
|  0           |  0          |
|  10+         |  Guide      |
|  Repeat      |  Text       |
|  Open/Close  |  Eject      |
|  Memory      |  Back       |
|  Clear       |  Exit       |
|  Clock/Timer |  Shift + AV |

| Original  | Replacement  |
|---|--|
|  Sleep         |  Sleep    |
|  Bass/Treble   |  Dual     |
|  X-Bass        |  Subt     |
|  Random        |  Media    |
|  I<<<</Tuning  |  I<<      |
|  >>>>/Tuning   |  >>I      |
|  Preset Up     |  Up       |
|  Preset Down   |  Down     |
|  Enter         |  Ok       |
|  Vol+          |  Vol +    |
|  Vol-        |  Vol -  |
|  Mute        |  Mute   |
|  Folder      |  Smart  |
|  Demo/Dimmer |  3D     |
|  CD          |  Yellow |
|  USB         |  Blue   |
|  Tuner/Dab   |  Green  |





|   | Original         | Replacement   |              |
|---|------------------|---|--------------|
|    | Input/Audio Line |  AV            | AV           |
|    | iPod             |  A             | Red          |
|    | (Tv Out)/Display |  TV/R          | TV/R         |
|    | Menu             |  MENU          | Menu         |
|    | Play/Pause       |                | Play         |
|    | Display CD/USB   |  INFO          | Info         |
|    | Stop CD/USB      |                | Stop         |
|    | Play/Pause       |                | Pause        |
|    | ASPM RDS         |  FORMAT        | Format       |
|    | PTY RDS          |  PRE-CH        | Pre Ch       |
|   | Display RDS      |  SHIFT + INFO | Shift + Info |
|  | Scan DAB         |              | Left         |
|  | Enter DAB        |  SHIFT + OK  | Shift + Ok   |
|  | Display DAB      |              | Right        |
|   |                  |   |              |
|   |                  |   |              |
|   |                  |   |              |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

