 




 

 











 

 

 

 
 









 

 












Original	Replacement
	 AV / Input / RDS
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Back / Return
	 Setup / OPT /
	 Smart / List
	 Fav / Marker / PC

Original	Replacement
	 Info / Angle
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 CH- / Page-
	 Audio / Lang I/II
	 Sound / Title
	 D.Menu / Top
	 Sleep / Timer
	 Up
	 Left
	 OK
	 Right
	 Menu / Home
	 Down





Original	Replacement
EXIT	CLEAR EXIT / Cancel / Clear
Red	NETFLIX Red / Netflix / Search
Green	APP Green / APP / Repeat
Yellow	YouTube Yellow / YouTube / Repeat
Blue	Prime Video Blue / Prime Video / Random
TELETEXT	GOTO TEXT Text / Goto
SUBTITLE	EQ SUBTITLE Subtitle / EQ
SIZE	ZOOM Zoom / Size
SUBPAGE	SURROUND Eject / Surround
INDEX	MEDIA DISPLAY Display / Media
HOLD	SHIFT +  HOLD Shift + Stop /
REVEAL	PROGRAM TV/RADIO TV/Radio /
FREEZE	STEP-FREEZE Pause / Step / Freeze
I<<	PRESET- I<< / Preset-
Stop	HOLD Stop / Hold
Play/Pause	SLOW Play / Slow
>>I	PRESET+ >>I / Preset+

Original	Replacement

