

 






 


 
 


 
 
 




 




 
 

 

 



 
 


 
 
 
 

 
 
 
 

 


 
 


 
 


 









Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 AV Mode	 Shift + AV	 P+	 Ch +
 Radio	 TV/R	 P-	 Ch -
 TruSurround	 List	 Vol+	 Vol +
 OPC	 Media	 Vol-	 Vol -
 DTV	 Smart	 Mute	 Mute
 1	 1	 [<>]	 Format
 2	 2	 ▼/O)/I/II/I+II	 Dual
 3	 3	 [i+]	 Info
 4	 4	 Sleep	 Sleep
 5	 5	 EPG	 Guide
 6	 6	 ESG	 Options
 7	 7	 DTV Menu	 D. Menu
 8	 8	 [≡]	 Text
 9	 9	 Menu	 Menu
 0	 0	 End	 Exit
 Recall	 Pre Ch	 Return	 Back





Original		Replacement		Original		Replacement	
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	[≡?]		3D				
	[≡+]		Eject				
	[...]		Subt				
	[≡o]		Shift + 3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

