









 





Original		Replacement		Original		Replacement	
	RDS ASPM		D.Menu / Top		9		9
	Direct		Info / Angle		0		0
	RDS PTY		Text / Goto		+10		Guide / EPG / -/-
	On Screen		Smart / List		Memory /		Mute / Dimmer
	RDS Display		Setup / OPT /		Zoom		Zoom / Size
	Clear / Display		Display / Media		Subtitle		Subtitle / EQ
	Clear / Display		Exit / Cancel / Clear		Menu		Menu / Home
	On / Stand By		Power		Up / Tuning+		Shift + Tune+ / >> /
	1		1		Up / Tuning+		Up
	2		2		Return		Back / Return
	3		3		Left		Left
	Clock / Timer		Sleep / Timer		Enter		OK
	4		4		Right		Right
	5		5		>> / >> /		>> / Tune+
	6		6		I<< / << / Preset-		I<< / Preset-
	7		7		I<< / << / Preset-		<< / Tune-
	8		8		Down / Tuning-		Shift + Tune- / << /

Tune-





Original	Replacement	Original	Replacement
Down / Tuning-	Down	Dolby VS	Sound / Title
>>I / >> /	>>I / Preset+	Volume-	Vol-
USB Play/Pause	Pause / Step / Freeze	Volume+	Vol+
Slow	Shift + Play /		
DVD/CD	Play / Slow		
Stop	Stop / Hold		
Still	Shift + Pause / Step /		
DVD/CD	Shift + 2		
DVD/CD	Shift + 3		
DVD/CD	Green / APP / Repeat		
USB	Shift + 8		
USB	Blue / Prime Video / Random		
AUX	Shift + 7		
AUX	Red / Netflix / Search		
TUNER	Shift + 6		
TUNER	Yellow / YouTube / Repeat		
Audio	Audio / Lang I/II		

