



Original	Replacement
On	Power
Off	Shift + Power
Up	Up
Enter	Enter
Down	Down
Right	Right
Left	Left
Menu	Menu
Keystone	Shift + Up
Keystone	Shift + Down
Back	Shift + Left
Enlarge+	+ / Play
Forward	Shift + Right
Enlarge-	- / Stop
Vol+	Vol + / Page +
Vol-	Vol - / Page -
Freeze	Freeze / Timer

Original	Replacement
AV Mute	Blank / Mute
Auto Sync	Auto
Resize	Eco / Aspect
Undo	Mode
Input 1	Source
Input 2	Shift + Source
Input 3	Comp / Video

