

 



 


 
 
 

 
 



 


 




Original	Replacement
 Power	 Power
 TV/VCR	 TV/Radio /
 DVD	 Shift + 2
 PR+	 CH+ / Page+
 1	 1
 2	 2
 3	 3
 PR-	 CH- / Page-
 4	 4
 5	 5
 6	 6
 Vol+	 Vol+
 7	 7
 8	 8
 9	 9
 Vol-	 Vol-
 0/AV	 0

Original	Replacement
 0/AV	 AV / Input / RDS
 Info	 Info / Angle
 Setup / Menu	 Setup / OPT /
 Setup / Menu	 Menu / Home
 Mute	 Mute / Dimmer
 Up	 Up
 Left	 Left
 Enter/[=]	 OK
 Enter/[=]	 Text / Goto
 Right	 Right
 DVD Menu	 D.Menu / Top
 Down	 Down
 Cancel/[≡◇]	 Exit / Cancel / Clear
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 TRK/Skip-/I<<	 I<< / Preset-





Original	Replacement
TRK/Skip-/>>	>>  / Preset+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Rec/Otr	Rec / Rec Mode
Time Rec	+  Shift + Sleep / Timer
Index/[≡☺]/[≡□]	Smart / List
II>	+  Shift + Pause / Step / Step
Repeat	Yellow / YouTube / Repeat
Repeat	+  Shift + TV/Radio / Program
Jump/[≡+]/SP/LP	Picture / Format
Angle/00:00:00	+  Shift + Info / Angle
Subtitle/Zero	Subtitle / EQ
Zoom/[≡?]	Zoom / Size
Title/ATR	Sound / Title
Return	Back / Return
Play Mode/P→P	Display / Media
Timer	Sleep / Timer

Original	Replacement
Audio	Audio / Lang I/II
Eject	+  Shift + Eject / Surround
Open/Close	Eject / Surround

