






 

 

 





 

 

 



 
 
 
 


 
 
 

 



 



 

 

 
 
 
 


 
 
 


 

 
 


 

 
 





 

 
 






 

 


 
 
 
 
 


 
 

 
 
 




Original		Replacement		Original		Replacement	
	Power		Power		Timer Rec		AV
	Eject		Shift + Eject		Rec OTR		Rec
	Open/Close		Eject		Marker/Tape		Options
	Display Call		Info		Jump/Zero Return		Pre Ch
	1		1		Clock/Counter		Yellow
	2		2		Counter Reset		Green
	3		3		Tv/VCR		TV/R
	4		4		VCR		Smart
	5		5		DVD		Media
	6		6		Setup Menu		Menu
	7		7		DVD Menu		D. Menu
	8		8		Up		Up
	9		9		Down		Down
	0/AV		0		Right/TRK+		Right
	Channel+		Ch +		Left/TRK-		Left
	Channel-		Ch -		Enter/Select		Ok
	Showview/Progra		Guide		Title		Red





	Original	Replacement	Original	Replacement
	Return	 Back		
	Stop	 Stop		
	Play	 Play		
	Pause	 Pause		
	I<</- Index/Skip	 I<<		
	<<	 <<		
	>>	 >>		
	>>I/Skip/Index +	 >>I		
	I>/Slow	 Blue		
	Cancel	 Exit		
	Repeat A-B	 Text		
	Zoom	 3D		
	Angle	 List		
	Play Mode	 +  Shift + Play		
	Subtitle	 Subt		
	Audio	 Dual		

