



Original		Replacement		Original		Replacement	
	Power		Power		Up / CH +		Ch +
	Mute		Mute		Down / CH -		Down
	1		1		Down / CH -		Ch -
	2		2		Right / Vol +		Right
	3		3		Right / Vol +		Vol +
	4		4		Left / Vol -		Left
	5		5		Left / Vol -		Vol -
	6		6		OK		Ok
	7		7		PG +		Shift + Ch +
	8		8		PG -		Shift + Ch -
	9		9		TV / Radio		TV/R
	0		0		SUB		Subt
	Info		Info		TTX		Text
	EPG		Guide		Audio		Dual
	Menu		Menu		Last		Back
	Exit		Exit		Mode		Smart
	Up / CH +		Up		White / Sleep		Sleep





Original	Replacement	Original	Replacement
White / Sleep	Pre Ch		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		

