



Original	Replacement	Original	Replacement
 Sleep	 Sleep / Timer	 Clear	 Exit / Cancel / Clear
 Clock/Timer	 Shift + Sleep / Timer	 Play Mode	 Play / Slow
 Clock/Timer Set	 TV/Radio /	 Repeat	 Green / APP / Repeat
 Power	 Power	 Enter	 OK
 Function	 D.Menu / Top	 I<<	 I<< / Preset-
 Tuner Memory	 6	 Vol+	 Vol+
 Display	 Display / Media	 >>I	 >>I / Preset+
 Tape	 5	 EQ-	 Shift + Vol-
 <> Tape	 Shift + 5	 EQ	 Subtitle / EQ
 Stop Tape	 Shift + Stop /	 EQ+	 Shift + Vol+
 Tuner/Band	 Shift + 6	 Vol-	 Vol-
 Tuner/Band	 CH- / Page-	 <<	 << / Tune-
 Tuner/Band	 CH+ / Page+	 >>	 >> / Tune+
 CD	 3		
 Play CD	 Shift + Play /		
 Pause CD	 Pause / Step / Freeze		
 Stop CD	 Stop / Hold		

