
 









 

 

 

 















 


 
 


 
 
 



 













 






 

 



 

 



Original	Replacement
 Power	 Power
 Tuner	 Media
 SA-CD/CD	 Shift + Blue
 TV	 Shift + Yellow
 SAT	 Shift + Green
 DVD	 Shift + Red
 Video3	 Blue
 Video2	 Yellow
 Video1	 Green
 DMPort	 Red
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 AV/TV Power	 Shift + Power
 Sleep/Tv Input	 AV

Original	Replacement
 A.F.D.	 List
 Movie	 Format
 Music	 3D
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 -/->10/Clear	 Guide
 Enter/Memory	 Pre Ch





Original	Replacement
 AMP Menu	 Smart
 D.Tuning/D.Skip	 TV/R
 DVD Menu/FM	 D. Menu
 Muting	 Mute
 Display	 Info
 Menu	 Menu
 Auto Cal	 Back
 Tools	 Options
 Return/Exit	 Exit
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <</Tuning-	 <<
 >>/Tuning+	 >>
 I<</TV	 Ch -
 >>I/TV	 Ch +
 ←/Replay	 I<<


Original	Replacement
 →/Advance	 >>I
 1 Tuner	 Shift + 1
 2 Tuner	 Shift + 2
 3 Tuner	 Shift + 3
 4 Tuner	 Shift + 4
 5 Tuner	 Shift + 5
 6 Tuner	 Shift + 6
 7 Tuner	 Shift + 7
 8 Tuner	 Shift + 8
 9 Tuner	 Shift + 9
 0/10 Tuner	 Shift + 0
 Enter/Memory	 Shift + Pre Ch
 D.Tuning/D.Skip Tuner	 Shift + Back
 DVD Menu/FM Mode Tuner	 Shift + D. Menu
 Display Tuner	 Shift + Info
 OK Tuner	 Shift + Ok
 Up Tuner	 Shift + Up







Original	Replacement
 Power	 Power
 Tuner	 Media
 SA-CD/CD	 Shift + Blue
 TV	 Shift + Yellow
 SAT	 Shift + Green
 DVD	 Shift + Red
 Video3	 Blue
 Video2	 Yellow
 Video1	 Green
 DMPort	 Red
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 0/10	 0
 Muting	 Mute
 Tools	 Options
 Display	 Info
 -/-->10/Clear	 Guide
 Memory Enter	 Pre Ch
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -
 Menu	 Menu
 Return/Exit	 Exit












 


 




 



 








 



 
 


 
 


 
 



 

 


 

 

 
 
 











Original	Replacement
TV CH-	Ch -
TV CH+	Ch +
Tv Input	AV
AV/TV Power	Shift + Power
1 Video1	Shift + 1
2 Video1	Shift + 2
3 Video1	Shift + 3
4 Video1	Shift + 4
5 Video1	Shift + 5
6 Video1	Shift + 6
7 Video1	Shift + 7
8 Video1	Shift + 8
9 Video1	Shift + 9
0/10 Video1	Shift + 0
-/ ->10/Clear Video1	Shift + Guide
Enter/Memory	Shift + Pre Ch
Display Video1	Shift + Info

Original	Replacement
Menu Video1	Shift + Menu
OK Video1	Shift + Ok
Up Video1	Shift + Up
Down Video1	Shift + Down
Right Video1	Shift + Right
Left Video1	Shift + Left
Play Video1	Play
Pause Video1	Pause
Stop Video1	Stop
<</Tuning-	<<
>>/Tuning+	>>
I<</TV CH-/Preset-	Shift + Ch -
>>/TV CH+/Preset+	Shift + Ch +
<-/Replay Video1	I<<
->/Advance Video1	>>I





	Original	Replacement		Original	Replacement
	AV/TV Power	 Power		5	 5
	Tuner	 Media		6	 6
	SA-CD/CD	 Shift + Blue		7	 7
	TV	 Shift + Yellow		8	 8
	SAT	 Shift + Green		9	 9
	DVD	 Shift + Red		0/10	 0
	Video3	 Blue		-/->10/Clear	 Guide
	Video2	 Yellow		Enter/Memory/	 Pre Ch
	Video1	 Green		D.Tuning/D.Skip	 TV/R
	DMPort	 Red		Display	 Info
	Master Vol-	 Vol -		Play	 Play
	Master Vol+	 Vol +		Pause	 Pause
	2CH	 Dual		Stop	 Stop
	1	 1		<</Tuning-	 <<
	2	 2		>>/Tuning+	 >>
	3	 3		I<</TV	 Ch -
	4	 4		>>I/TV	 Ch +



CH+/Preset+





Original	Replacement
 Tuner	 Media
 SA-CD/CD	 Shift + Blue
 TV	 Shift + Yellow
 SAT	 Shift + Green
 DVD	 Shift + Red
 Video3	 Blue
 Video2	 Yellow
 Video1	 Green
 DMPOR	 Red
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 AV/TV Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Original	Replacement
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 Enter/Memory	 Pre Ch
 -/10/Clear	 Guide
 Display	 Info
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Pause	 Pause
 Stop	 Stop







Original	Replacement
 >>/Tuning+	 >>
 <</Tuning-	 <<
 I<</TV	 Ch -
 >>I/TV	 Ch +
 ←/Replay	 I<<
 →/Advance	 >>I
 1 DMPort	 Shift + 1
 2 DMPort	 Shift + 2
 3 DMPort	 Shift + 3
 4 DMPort	 Shift + 4
 5 DMPort	 Shift + 5
 6 DMPort	 Shift + 6
 7 DMPort	 Shift + 7
 8 DMPort	 Shift + 8
 9 DMPort	 Shift + 9
 0/10 DMPort	 Shift + 0
 Tools DMPort	 Options

Original	Replacement
 Menu DMPort	 Shift + Menu
 Return/Exit	 Exit
 I<</TV CH-/Preset-	 Shift + Ch -
 >>I/TV CH+/Preset+	 Shift + Ch +
 Play DMPort	 Shift + Play
 Pause DMPort	 Shift + Pause
 Stop DMPort	 Shift + Stop
 <</Tuning-	 Shift + <<
 >>/Tuning+	 Shift + >>

