

 






 





 



 
 


 
 


 



 



 
 


 
 

 



 


 
 


 


 

 
 











Original	Replacement	Original	Replacement
 System Standby	 Power	 Music	 Blue
 Muting	 Mute	 Master Vol +	 Vol +
 Menu	 Menu	 Master Vol -	 Vol -
 1	 1	 >>I / Preset +	 >>I
 2	 2	 I<< / Preset -	 I<<
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Sleep	 Sleep
 9	 9	 FM Mode	 Smart
 0 / 10	 0	 Enter / Memory	 Media
 Display	 Info	 Auto Cal	 Options
 2 CH	 Red	 << / Tuning -	 <<
 AFD	 Green	 >> / Tuning +	 >>
 Movie	 Yellow	 D.Tuning	 Text





	Original	Replacement	
VIDEO 1	Video 1	<b>SHIFT</b> + <b>1</b>	Shift + 1
VIDEO 2	Video 2	<b>SHIFT</b> + <b>2</b>	Shift + 2
VIDEO 3	Video 3	<b>SHIFT</b> + <b>3</b>	Shift + 3
DVD	DVD	<b>SHIFT</b> + <b>4</b>	Shift + 4
SAT	SAT	<b>SHIFT</b> + <b>5</b>	Shift + 5
TV	TV	<b>SHIFT</b> + <b>6</b>	Shift + 6
SA-CD / CD	SA-CD / CD	<b>SHIFT</b> + <b>7</b>	Shift + 7
Tuner	Tuner	<b>SHIFT</b> + <b>8</b>	Shift + 8

 
 
 




 
 
 
 
 

 
 
 

 
 
 






 






 
Original	Replacement













 

 


 
 


 












 






 




 
 



 
Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0/10	 0
 -/-->10	 Guide
 Enter/Memory	 Pre Ch
 Menu	 Menu
 DVD Menu	 D. Menu
 Return/Exit	 Exit
 Tools	 Options
 Display	 Info
 D.Tuning/D.Skip	 Dual
 FM Mode	 AV
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right











 


 


 

 

 
 




 
 
 

 

 

 
 


Original	Replacement
	 Left
	 Play
	 Pause
	 Stop
	 <</Tuning-
	 >>/Tuning+
	 >>I/Preset+
	 I<</Preset-
	 ←/Replay
	 →/Advance
	 Media
	 +  Shift + Media
	 +  Shift + Dual
	 +  Shift + Pre Ch
	 +  Shift + 1
	 +  Shift + 2
	 +  Shift + 3

Original	Replacement
	 +  Shift + 4
	 +  Shift + 5
	 +  Shift + 6
	 +  Shift + 7
	 +  Shift + 8
	 +  Shift + 9
	 +  Shift + 0
	 3D
	 +  Shift + Ok
	 +  Shift + Up
	 +  Shift + Down
	 +  Shift + Right
	 +  Shift + Left
	 +  Shift + Ch -
	 +  Shift + Ch +
	 Text
	+  Shift + AV







Original	Replacement
 Power	 Power
 Play	 Play
 Stop	 Stop
 Auto Cal	 Smart
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 >10* CLEAR	 Guide
 OK	 Ok

Original	Replacement
 Enter/Memory	 Pre Ch
 Menu	 Menu
 Display	 Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 FM Mode	 AV
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 Pause	 Pause
 >>/Tuning+	 >>





	Original	Replacement		Replacement
	<</Tuning-		<<	
	>> /Preset+		>>	
	<</Preset-		<<	
	←-/Replay		Ch -	
	→/Advance		Ch +	
	Video 3	+	Shift + Media	
	Video 1		Media	
	Power AV		Info	
	Tv Power	+	Shift + Power	
	Tv/Video		TV/R	
	Tv Vol+	+	Shift + Right	
	Tv Vol-	+	Shift + Left	
	Tv CH-	+	Shift + Ch -	
	Tv CH+	+	Shift + Ch +	


 
	Original	Replacement














 



 


Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0

Original	Replacement
 -/-->10	 +  Shift + Guide
 Enter/Memory	 Pre Ch
 FM Mode	 AV
 Display	 +  Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <</Tuning-	 <<





Original	Replacement	Original	Replacement
 >>/Tuning+	 >>	 7 SA-CD/CD	 Shift + 7
 >> /Preset+	 >>	 8 SA-CD/CD	 Shift + 8
  <</Preset-	  <<	 9 SA-CD/CD	 Shift + 9
 <-/Replay	 Ch -	 0/10 SA-CD/CD	 Shift + 0
 ->/Advance	 Ch +	 -/->10 SA-CD/CD	 Guide
 Video 2	 Media	 Display SA-CD/CD	 3D
 SA-CD/CD	 Shift + Media	 Stop SA-CD/CD	 Shift + Stop
 Power AV	 Info	 Pause	 Shift + Pause
 2CH	 Red	 Play SA-CD/CD	 Shift + Ok
 D.Tuning/D.Skip SA-CD/CD	 Dual	 <</Tuning-	 Shift + Left
 Enter/Memory SA-CD/CD	 Shift + Pre Ch	 >>/Tuning+	 Shift + Right
 1 SA-CD/CD	 Shift + 1	  <</Preset-SA-CD/CD	 Shift + Ch -
 2 SA-CD/CD	 Shift + 2	 >> /Preset+ SA-CD/CD	 Shift + Ch +
 3 SA-CD/CD	 Shift + 3		
 4 SA-CD/CD	 Shift + 4		
 5 SA-CD/CD	 Shift + 5		
 6 SA-CD/CD	 Shift + 6		

Original	Replacement	Original	Replacement
 7 SA-CD/CD	 Shift + 7	 8 SA-CD/CD	 Shift + 8
 9 SA-CD/CD	 Shift + 9	 0/10 SA-CD/CD	 Shift + 0
 -/->10 SA-CD/CD	 Guide	 Display SA-CD/CD	 3D
 Stop SA-CD/CD	 Shift + Stop	 Pause	 Shift + Pause
 Play SA-CD/CD	 Shift + Ok	 <</Tuning-	 Shift + Left
 >>/Tuning+	 Shift + Right	  <</Preset-SA-CD/CD	 Shift + Ch -
 >> /Preset+ SA-CD/CD	 Shift + Ch +		

