




 


 

 
 
 
 

 

 
 
 
 






 
 







 





 









 


 




Original	Replacement
 System Standby	 Power
 Muting	 Mute
 Menu	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / 10	 0
 Display	 Info
 2 CH	 Red
 AFD	 Green
 Movie	 Yellow

Original	Replacement
 Music	 Blue
 Master Vol +	 Vol +
 Master Vol -	 Vol -
 >>I / Preset +	 >>I
 I<< / Preset -	 I<<
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Sleep	 Sleep
 FM Mode	 Smart
 Enter / Memory	 Media
 Auto Cal	 Options
 << / Tuning -	 <<
 >> / Tuning +	 >>
 D.Tuning	 Text



 
 
 



 
 
 
 
 
 
 
 
 

 
 


 




 
 




	Original	Replacement		Original	Replacement
	Video 1	 + 	Shift + 1		
	Video 2	 + 	Shift + 2		
	Video 3	 + 	Shift + 3		
	DVD	 + 	Shift + 4		
	SAT	 + 	Shift + 5		
	TV	 + 	Shift + 6		
	SA-CD / CD	 + 	Shift + 7		
	Tuner	 + 	Shift + 8		









 

 



 

 








 


 







 

Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0/10	 0
 -/-->10	 Guide
 Enter/Memory	 Pre Ch
 Menu	 Menu
 DVD Menu	 D. Menu
 Return/Exit	 Exit
 Tools	 Options
 Display	 Info
 D.Tuning/D.Skip	 Dual
 FM Mode	 AV
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right











 
 
 

 




 
 

 







 
 

 







 

Original	Replacement
	 Left
	 Play
	 Pause
	 Stop
	 <</Tuning-
	 >>/Tuning+
	 >>I/Preset+
	 I<</Preset-
	 ←/Replay
	 →/Advance
	 DVD
	 Tuner
	 D.Tuning/D.Skip Tuner
	 Enter/Memory
	 1 Tuner
	 2 Tuner
	 3 Tuner

Original	Replacement
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0
	 Display Tuner
	 OK Tuner
	 Up Tuner
	 Down Tuner
	 Right Tuner
	 Left Tuner
	 <</Tuning- Tuner
	 >>/Tuning+
	 I<</Preset-/Tv CH- Tuner
	 >>I/Preset+/Tv CH+ Tuner





Original	Replacement
 Power	 Power
 Play	 Play
 Stop	 Stop
 Auto Cal	 Smart
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 >10* CLEAR	 Guide
 OK	 Ok

Original	Replacement
 Enter/Memory	 Pre Ch
 Menu	 Menu
 Display	 Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 FM Mode	 AV
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 Pause	 Pause
 >>/Tuning+	 >>





	Original	Replacement		Replacement
	<</Tuning-		<<	
	>> /Preset+		>>	
	<</Preset-		<<	
	←/Replay		Ch -	
	→/Advance		Ch +	
	Video 3		Shift + Media	
	Video 1		Media	
	Power AV		Info	
	Tv Power		Shift + Power	
	Tv/Video		TV/R	
	Tv Vol+		Shift + Right	
	Tv Vol-		Shift + Left	
	Tv CH-		Shift + Ch -	
	Tv CH+		Shift + Ch +	

Original	Replacement
















 
 

 
 
 
 




Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0

Original	Replacement
 -/-->10	 +  Shift + Guide
 Enter/Memory	 Pre Ch
 FM Mode	 AV
 Display	 +  Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <</Tuning-	 <<





Original	Replacement
 >>/Tuning+	 >>
 >>I/Preset+	 >>I
 I<</Preset-	 I<<
 <-/Replay	 Ch -
 ->/Advance	 Ch +
 Video 2	 Media
 SA-CD/CD	 Shift + Media
 Power AV	 Info
 2CH	 Red
 D.Tuning/D.Skip SA-CD/CD	 Dual
 Enter/Memory SA-CD/CD	 Shift + Pre Ch
 1 SA-CD/CD	 Shift + 1
 2 SA-CD/CD	 Shift + 2
 3 SA-CD/CD	 Shift + 3
 4 SA-CD/CD	 Shift + 4
 5 SA-CD/CD	 Shift + 5
 6 SA-CD/CD	 Shift + 6

Original	Replacement
 7 SA-CD/CD	 Shift + 7
 8 SA-CD/CD	 Shift + 8
 9 SA-CD/CD	 Shift + 9
 0/10 SA-CD/CD	 Shift + 0
 -/-->10 SA-CD/CD	 Guide
 Display SA-CD/CD	 3D
 Stop SA-CD/CD	 Shift + Stop
 Pause	 Shift + Pause
 Play SA-CD/CD	 Shift + Ok
 <</Tuning-	 Shift + Left
 >>/Tuning+	 Shift + Right
 I<</Preset- SA-CD/CD	 Shift + Ch -
 >>I/Preset+ SA-CD/CD	 Shift + Ch +

