 

 

 

 

 

 

 

 



 

 



 
 




 







Original	Replacement
 Sleep	 Sleep / Timer
 Standby AV	 Shift + Power
 System Standby	 Power
 Video1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 Top Menu	 Shift + D.Menu / Top Menu
 1 Tuner	 1
 2 Up	 Up
 2 Tuner	 2
 DVD Menu	 D.Menu / Top
 3 Tuner	 3
 4 Left	 Left
 4 Tuner	 4

Original	Replacement
 5 Enter	 OK
 5 Tuner	 5
 6 Right	 Right
 6 Tuner	 6
 7 Tuner	 7
 8 Down	 Down
 8 Tuner	 8
 9 Recall	 Fav / Marker / PC
 9 Tuner	 9
 >10 Tuner/Shift/-/-	 Guide / EPG / -/-
 0 Tuner	 0
 Enter/D.Tuning/Return Tuner	 Back / Return
 I<</CH/Presets	 I<< / Presets
 I<</CH Presets-Tuner	 Shift + I<< / Presets
 >>I/CH/Presets+	 >>I / Presets+
 >>I/CH Presets+ Tuner	 Shift + >>I / Presets+
 Tv/Video/ANT	 AV / Input / RDS





Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 2CH	 Sound / Title
 A.F.D.	 Eject / Surround
 Movie/Music	 Audio / Lang I/II
 Test Tone	 Subtitle / EQ
 Main Menu	 Menu / Home
 Multi CH	 Picture / Format
 < Menu	 Shift + Left
 Menu >	 Shift + Right
 Muting	 Mute / Dimmer
 -	 CH- / Page-
 +	 CH+ / Page+

Original	Replacement
 Master Vol+	 Vol+
 Tv Vol+	 Shift + Vol+
 Tv CH+	 Shift + CH+ /
 Master Vol-	 Vol-
 Tv Vol-	 Shift + Vol-
 Tv CH-	 Shift + CH- /





 

 

 
 




 

 

 

 









 

 





Original	Replacement
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Replacement
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original	Replacement
 Standby CD	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 CD	 1
 1 Video 1	 Shift + 1
 2 CD	 2
 2 Video 1	 Shift + 2
 3 CD	 3
 3 Video 1	 Shift + 3
 4 CD	 4
 4 Video 1	 Shift + 4
 5 CD	 5

Original	Replacement
 5 Video 1	 Shift + 5
 6 CD	 6
 6 Video 1	 Shift + 6
 7 CD	 7
 7 Video 1	 Shift + 7
 8 CD	 8
 8 Video 1	 Shift + 8
 9 CD	 9
 9 Video 1	 Shift + 9
 >10/Shift/-/ CD	 Guide / EPG / -/ -
 >10/Shift/-/ Video 1	 Shift + Guide / EPG / -/ -
 0 CD	 0
 0 Video 1	 Shift + 0
 Enter/D.Tuning/Return CD	 Back / Return
 Enter/D.Tuning/Return Video 1	 Shift + Back / Return
 I<< CD	 I<< / Preset-
 I<< Video 1	 Shift + I<< / Preset-





Original	Replacement
>> CD	>> / Preset+
>> Video 1	+ Shift + >> / Preset+
<<< CD	<<< / Tune-
<<< Video 1	+ Shift + <<< /
>>> CD	>>> / Tune+
>>> Video 1	+ Shift + >>> /
D.Skip/TV/VTR CD	TV/Radio /
D.Skip/TV/VTR Video 1	+ Shift + TV/Radio / Program
Play CD	Play / Slow
Play Video 1	+ Shift + Play /
Pause CD	Pause / Step / Freeze
Pause Video 1	+ Shift + Pause / Step /
Stop CD	Stop / Hold
Stop Video 1	+ Shift + Stop /
Muting	Mute / Dimmer
Master Vol+	Vol+
Master Vol-	Vol-

Original	Replacement





Original	Replacement
Standby	Power
Standby Video	Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 MD/Tape	1
1 Video 2	Shift + 1
2 MD/Tape	2
2 Video 2	Shift + 2
3 MD/Tape	3
3 Video 2	Shift + 3
4 MD/Tape	4
4 Video 2	Shift + 4
5 MD/Tape	5

Original	Replacement
5 Video 2	Shift + 5
6 MD/Tape	6
6 Video 2	Shift + 6
7 MD/Tape	7
7 Video 2	Shift + 7
8 MD/Tape	8
8 Video 2	Shift + 8
9 MD/Tape	9
9 Video 2	Shift + 9
>10/Shift/-/- MD/Tape	Guide / EPG / -/-
>10/Shift/-/- Video 2	Shift + Guide / EPG / -/-
0 MD/Tape	0
0 Video 2	Shift + 0
Enter/D.Tuning/Return MD/Tape	Back / Return
Enter/D.Tuning/Return Video 2	Shift + Back / Return
I<< MD/Tape	I<< / Preset-
I<< Video 2	Shift + I<< / Preset-





Original		Replacement		Original	Replacement
	>>I MD/Tape		>>I / Preset+		
	>>I Video 2		Shift + >>I / Preset+		
	<< MD/Tape		<< / Tune-		
	<< Video 2		Shift + << /		
	>> MD/Tape		>> / Tune+		
	>> Video 2		Shift + >> /		
	D.Skip/TV/VTR MD/Tape		AV / Input / RDS		
	D.Skip/TV/VTR Video 2		Shift + AV / Input / RDS		
	Play MD/Tape		Play / Slow		
	Play Video 2		Shift + Play /		
	Pause MD/Tape		Pause / Step / Freeze		
	Pause Video 2		Shift + Pause / Step /		
	Stop MD/Tape		Stop / Hold		
	Stop Video 2		Shift + Stop /		
	Muting		Mute / Dimmer		
	Master Vol+		Vol+		
	Master Vol-		Vol-		

