





 
 



 

 




 







 
 

 
 







 















 


 
 


 
 









Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol -
 TV Power	 Shift + Power	 FAV	 Pre Ch
 TV Input	 AV	 Red	 Red
 Open / Close	 Exit	 Green	 Green
 1	 1	 Yellow	 Yellow
 2	 2	 Blue	 Blue
 3	 3	 Top Menu	 Shift + Menu
 4	 4	 Top Menu	 D. Menu
 5	 5	 Pop Up / Menu	 Menu
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 Audio	 Dual	 Return	 Back
 Subtitle	 Subt	 Options	 Options
 Vol+	 Vol +	 Home	 Smart





	Original	Replacement	Original	Replacement
	I<<	I<<		
	Pause	Pause		
	>>I	>>I		
	<<	<<		
	Play	PLAY MODE Play		
	>>	>>		
	Display	DISPLAY INFO Info		
	Stop	Stop		
	SEN	APP MEDIA Media		

