

 

 



 







 



 

 


 
 












 







 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Recall	 Back
 Mute	 Mute	 Timer/[≡i]	 List
 [i+]/[?]	 Info	 Timer/[X]	 Sleep
 A/B/[+]	 TV/R	 Vol+	 Vol +
 Input/[+]	 AV	 Vol-	 Vol -
 []	 Smart	 Prog+	 Ch +
 1	 1	 Prog-	 Ch -
 2	 2	 (↔)	 Dual
 3	 3	 Menu	 Menu
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 [≡]	 Text
 0	 0	 Red/Sound	 Red
 -/--	 Guide	 Green/*	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue/[+]	 Blue		

