


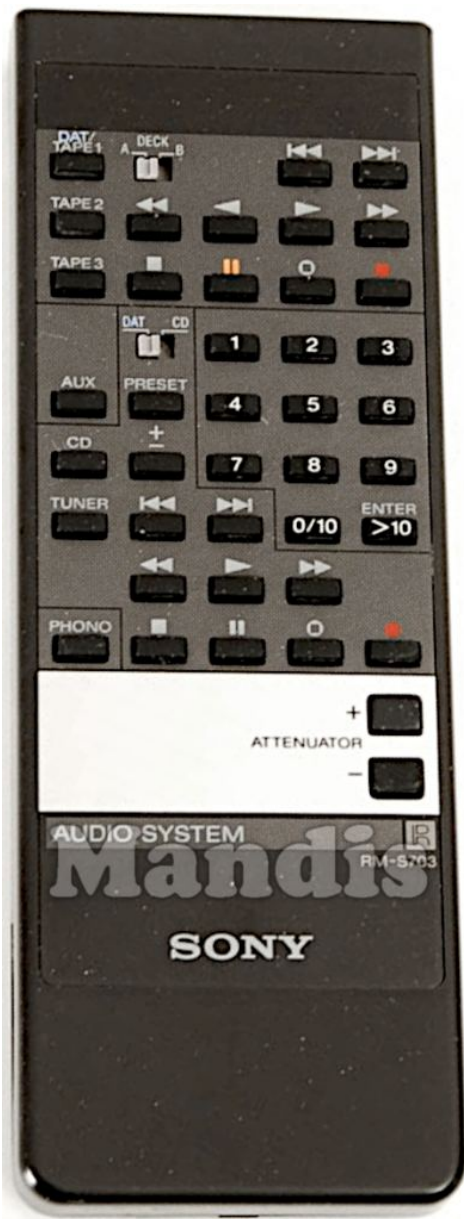

Original	Replacement
DAT/TAPE1	Shift + Red / Netflix /
TAPE2	Shift + Green / APP /
<< Deck A	Down
<< Deck B	Shift + Down
< Deck B	Shift + Left
< Deck A	Left
> Deck B	Shift + Right
> Deck A	Right
>> Deck B	Shift + Up
>> Deck A	Up
TAPE3	Shift + Yellow / YouTube /
Stop Deck A	OK
Stop Deck B	Shift + OK
Pause Deck B	Shift + Pause / Step /
Deck B Rec	Shift + Stop /
Rec Deck A	Rec / Rec Mode
Rec Deck B	Shift + Rec / Rec Mode

Original	Replacement
AUX	Yellow / YouTube / Repeat
Tuner Preset +	Shift + >>I / Preset+
Tuner Preset +	CH+ / Page+
CD	Red / Netflix / Search
Tuner Preset -	Shift + I<< / Preset-
Tuner Preset -	CH- / Page-
Tuner	Green / APP / Repeat
1 Tuner	1
2 Tuner	2
3 Tuner	3
4 Tuner	4
5 Tuner	5
6 Tuner	6
7 Tuner	7
8 Tuner	8
9 Tuner	9
0 Tuner	0





	Original	Replacement
	1 CD	+ Shift + 1
	2 CD	+ Shift + 2
	3 CD	+ Shift + 3
	4 CD	+ Shift + 4
	5 CD	+ Shift + 5
	6 CD	+ Shift + 6
	7 CD	+ Shift + 7
	8 CD	+ Shift + 8
	9 CD	+ Shift + 9
	10 CD	+ Shift + 0
	CD I<<	I<< / Preset-
	CD >>I	>>I / Preset+
	CD Play	Play / Slow
	Phono	Blue / Prime Video / Random
	CD Stop	Stop / Hold
	CD Pause	Pause / Step / Freeze
	Attenuator +	Vol+

	Original	Replacement
	Attenuator -	Vol-

