
 

 



 
 

 

 








 




Original	Replacement
 System Power	 Power
 Sleep	 Sleep
 Disc Skip	 Shift + Smart
 CD	 Yellow
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Tape	 Green
 Shift	 Menu
 Select 10	 Info
 P.File	 Ch +
 Tuner	 Blue
 Phono	 Red
 1	 1
 2	 2

Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 11	 Guide
 12	 Pre Ch
 13	 AV
 14	 Format
 15	 3D
 16	 Back
 Video 1	 Smart
 Video 2	 Media
 Video 3	 Shift + Media



 





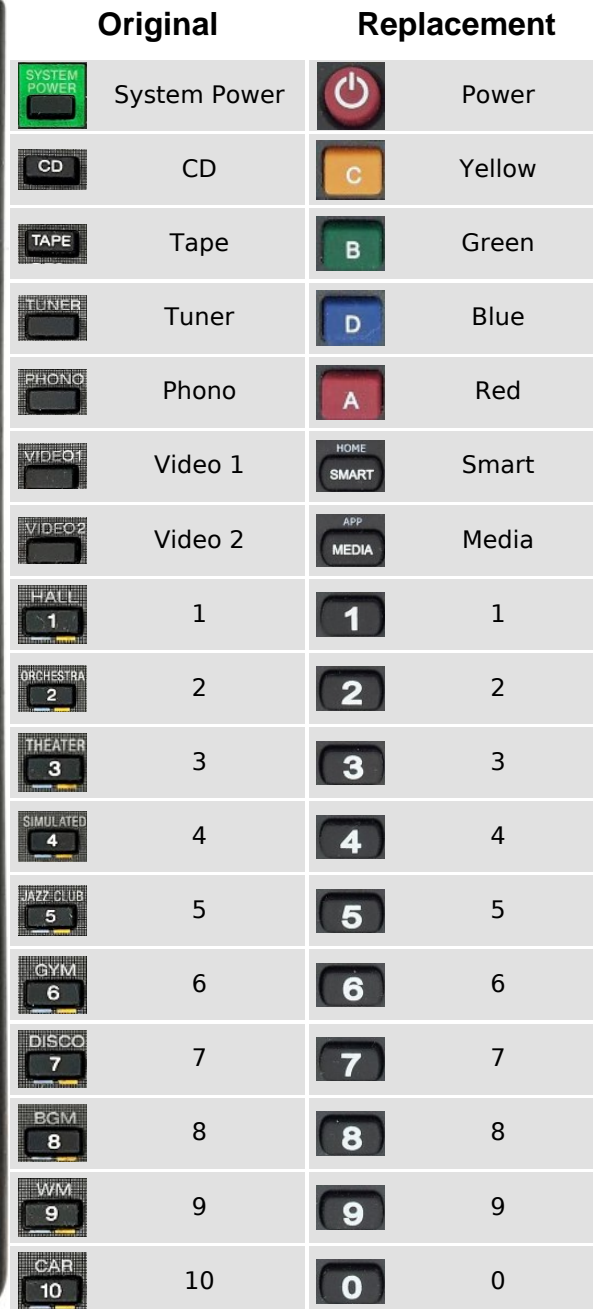




Original	Replacement
 << Deck A	 <<
 >> Deck A	 >>
 Stop Deck A	 Stop
 < Deck A	 Left
 Deck A >	 Right
 System Power	 Power
 Vol+	 Vol +
 Vol-	 Vol -
 Pause Deck A	 Pause
 O Deck A	 Play
 Rec Deck A	 Rec
 << Deck B	 <<
 >> Deck B	 >>
 < Deck B	 Shift + Left
 Deck B >	 Shift + Right
 Stop Deck B	 Shift + Stop
 Pause Deck B	 Shift + Pause

Original	Replacement
 O Deck B	 Text
 Rec Deck B	 AV
 CD	 Yellow
 Tape	 Green
 Tuner	 Blue
 Phono	 Red
 Video 1	 Smart
 Video 2	 Media
 Video 3	 Shift + Media



[illegible]



[illegible]