



 











 
 

 
 

 


 
















 


 


 

 

 
 
 











 





 





 

 
 

 
 
 
 

 
 
 
 

























	Original	Replacement		Original	Replacement
	Power		Power		Mute
	Audio		Dual		Vol +
	[+]		Format		Vol -
	Digital		Media		Info
	Analog		Smart		Menu
	1		1		Exit
	2		2		Back
	3		3		Ch +
	4		4		Ch -
	5		5		Options
	6		6		Guide
	7		7		
	8		8		
	9		9		
	0		0		
	[≡]		Text		
	Recall		Pre Ch		

 















 


 
 


 

 
 









 

 
 




 

 


 
 
 



 




 
 



 
 





Original	Replacement	Original	Replacement
	Power		Power
	Menu		Menu
	Top Menu		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	F1		Smart
	F2		Media
	[:≡]		Guide
	Display		Info
	Tools/Options		Options
	Return/Exit		Back
	Menu/Home		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause



















 
 


 
 


 
 




 






 

 


 
 



 


 


 


 
 
 


 
 
 






Original	Replacement	Original	Replacement
	Power		Power
	Menu		Menu
	Top Menu		D. Menu
	F1		Smart
	F2		Media
	[:=]		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Pre Ch
	Clear		Exit
	Display		Info
	Tools/Options		Options
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Return/Exit		Back
	Menu/Home		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>





Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Source		AV		Mute		Mute
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		Menu/Home		Media
	4		4		Return/Exit		Back
	5		5		Up		Up
	6		6		OK		Ok
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Play		Play
	Clear		Exit		Stop		Stop
	Enter		Pre Ch		Pause		Pause
	Theatre		Smart		>>/Tuning+		>>
	Sound Field		Dual		<</Tuning-		<<
	AMP Menu		Menu		>>I/Preset+		>>I



