
 

 








 

 
 



 
 
 
 
 
 
 
 
 






 
 
 
 
 
 

 
 
 
 
 

 
 
 
 


 
 

 

 




 

 



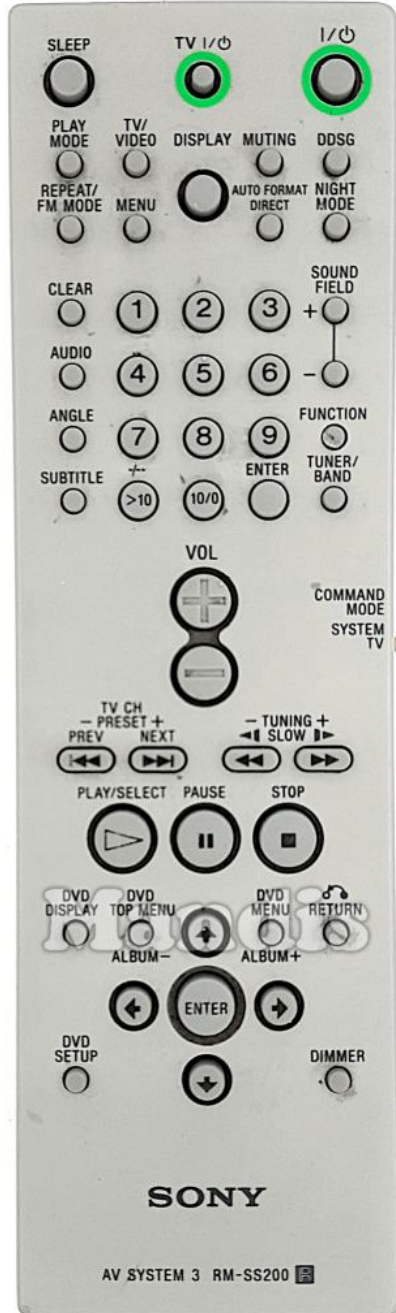


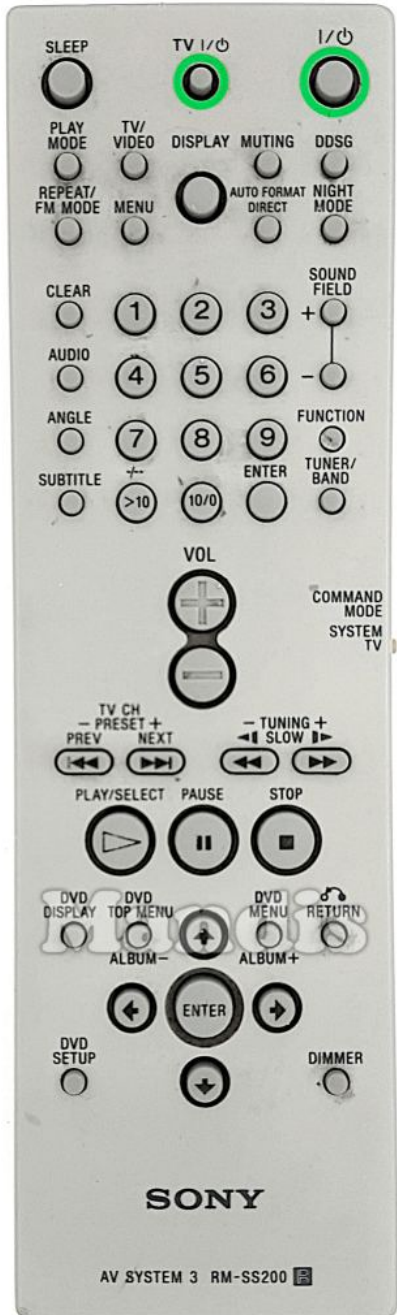 
Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Play Mode	 + 	Shift + Play
	Tv/Video		TV/R
	Repeat Mode		Text
	Menu		Smart
	Display		Info
	Muting		Mute
	Auto Format		List
	Night Mode		AV
	Clear		Exit
	Audio		Dual
	Angle		Red
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	>10 / -/--		Guide
	Enter		Pre Ch
	Sound Field+		Ch +
	Sound Field-		Ch -
	Function		Media
	Tuner Band		Format
	Vol+		Vol +
	Vol-		Vol -
	I<</Preset-		I<<
	>>I/Preset+		>>I



 
 
 
 



 
 
 
 

 
 
 

 

 




 



 






Original	Replacement	Original	Replacement
 <</> Slow/Tune-	 <<		
 Tuning+/Slow	 >>		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 DVD Display	 Shift + Info		
 DVD Top	 Menu		
 DVD Menu /	 D. Menu		
 Return	 Back		
 Up	 Up		
 Left	 Left		
 Enter	 Ok		
 Right	 Right		
 Down	 Down		
 DVD Setup	 Options		
 Dimmer	 Blue		





	Original	Replacement	Original	Replacement
	Power		Power	
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	-/--			
	TV Vol+			
	TV Vol-			
	TV CH+			
	TV CH-			
	Tv/Video	