

 

 

 
 
 

 


 
 

 

 

 

 


 
 
 



 
 


 
 
 
 

 


 


 
 
 

 





 

 

 

 













 



 






Original		Replacement		Original		Replacement	
	Power		Power		7		7
	Sleep		Sleep / Timer		Dimmer		Shift + Mute / Dimmer
	Input TV		AV / Input / RDS		8		8
	Power TV		Shift + Power		Time		Shift + Sleep / Timer
	Program		TV/Radio /		9		9
	1		1		0		0
	2		2		0/Subtitle		Subtitle / EQ
	Repeat		Green / APP / Repeat		Audio		Audio / Lang I/II
	Function+		CH+ / Page+		Angle		Info / Angle
	3		3		DVD Top Menu		Menu / Home
	EQ		Shift + Subtitle / EQ		DVD Menu		D.Menu / Top
	4		4		Setup		Setup / OPT /
	DSGX		Sound / Title		Display		Display / Media
	5		5		Muting		Mute / Dimmer
	Function-		CH- / Page-		Vol+		Vol+
	6		6		Vol-		Vol-
	Zoom		Zoom / Size		Up		Up





Original	Replacement	Original	Replacement
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	I<</Preset-		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I/Preset+		>>I / Preset+
	<</Tuning-		<< / Tune-
	Play		Play / Slow
	>>/Tuning+		>> / Tune+
	Stop		Stop / Hold

