

 







 

 

 



 





 

 



 















 






 




 









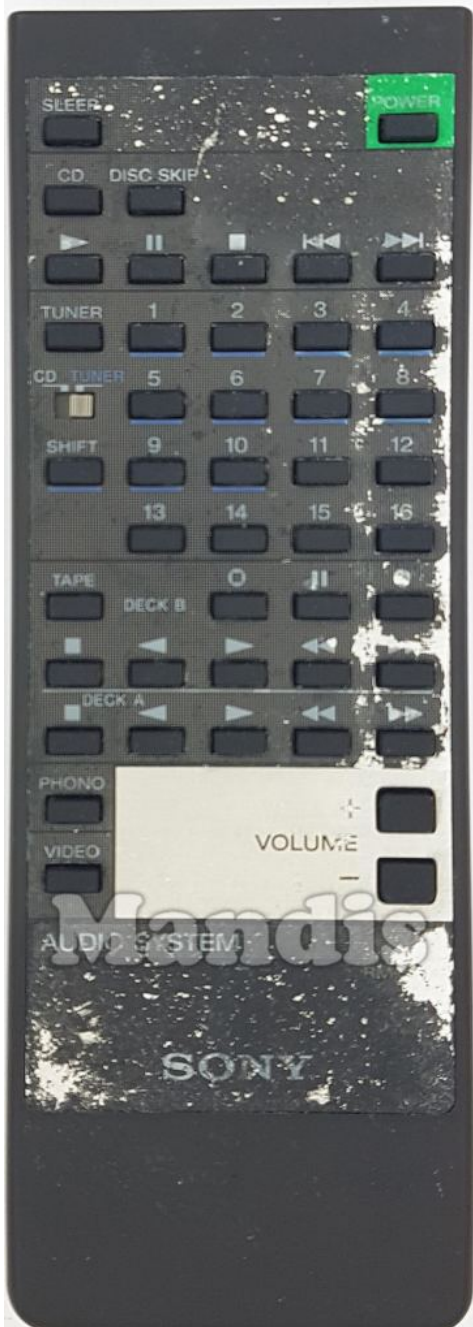 

 

 

 
 

 

 


 


 







 
 

 

 

 






| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Power |  Power |  3 Tuner |  3 |
|  Sleep |  Sleep / Timer |  4 Tuner |  4 |
|  Phono |  Red / Netflix / Search |  5 Tuner |  5 |
|  Video |  Blue / Prime Video / Random |  6 Tuner |  6 |
|  Tape |  Green / APP / Repeat |  7 Tuner |  7 |
|  Tuner |  TV/Radio / |  8 Tuner |  8 |
|  CD |  Yellow / YouTube / Repeat |  9 Tuner |  9 |
|  Volume+ |  Vol+ |  10 Tuner |  0 |
|  Volume- |  Vol- |  Shift |  Smart / List |
|  Disc Skip |  Zoom / Size |  1 CD |  Shift + 1 |
|  Play CD |  Play / Slow |  2 CD |  Shift + 2 |
|  Pause CD |  Pause / Step / Freeze |  3 CD |  Shift + 3 |
|  Stop CD |  Stop / Hold |  4 CD |  Shift + 4 |
|  I<< CD |  I<< / Preset- |  5 CD |  Shift + 5 |
|  >>I CD |  >>I / Preset+ |  6 CD |  Shift + 6 |
|  1 Tuner |  1 |  7 CD |  Shift + 7 |
|  2 Tuner |  2 |  8 CD |  Shift + 8 |





| Original | | Replacement | | Original | | Replacement | |
|--|------------------|---|----------------------------|--|-----------|---|-------------|
|  | 9 CD |  | Shift + 9 |  | > Deck B |  | Up |
|  | 10 CD |  | Shift + 0 |  | < Deck B |  | Down |
|  | 11 CD |  | Guide / EPG / -/-- |  | << Deck B |  | CH- / Page- |
|  | 12 CD |  | Fav / Marker / PC |  | >> Deck B |  | CH+ / Page+ |
|  | 13 CD |  | Shift + Guide / EPG / -/-- | | | | |
|  | 14 CD |  | Shift + Fav / Marker / PC | | | | |
|  | 15 CD |  | Display / Media | | | | |
|  | 16 CD |  | Shift + Display / Media | | | | |
|  | Stop Deck A |  | Shift + Stop / | | | | |
|  | << Deck A |  | << / Tune- | | | | |
|  | >> Deck A |  | >> / Tune+ | | | | |
|  | > Deck A |  | Right | | | | |
|  | < Deck A |  | Left | | | | |
|  | Pause Deck B |  | Shift + Pause / Step / | | | | |
|  | Rec Pause Deck B |  | Shift + Rec / Rec Mode | | | | |
|  | Rec Deck B |  | Rec / Rec Mode | | | | |
|  | Stop Deck B |  | OK | | | | |

