





 






 

 

 


 













 




 


Original	Replacement	Original	Replacement
Theatre	 Fav / Marker / PC	Clear	 Exit / Cancel / Clear
One-Touch Play	 +  Shift + Play /	0	 0
Power	 Power	Time	 +  Shift + Sleep / Timer
Sleep	 Sleep / Timer	Audio	 Audio / Lang I/II
Night	 Text / Goto	Subtitles / D.Tuning	 Subtitle / EQ
Dynamic Bass	 Eject / Surround	Angle	 +  Shift + Info / Angle
TV	 +  Shift + 1	System Menu	 +  Shift + Menu /
TV	 TV/Radio /	Red	 Red / Netflix / Search
1	 1	Green	 Green / APP / Repeat
2	 2	Yellow	 Yellow / YouTube / Repeat
3	 3	Blue	 Blue / Prime Video / Random
4	 4	Top Menu	 D.Menu / Top
5	 5	Display	 Display / Media
6	 6	Pop Up / Menu	 Menu / Home
7	 7	Up	 Up
8	 8	Left	 Left
9	 9	Enter	 OK





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	-/--	+	Shift + Guide / EPG / -/--
	Digital		Smart / List
	Analog		Display / Media
	Guide		Guide / EPG / -/--
	Home / Menu		Menu / Home

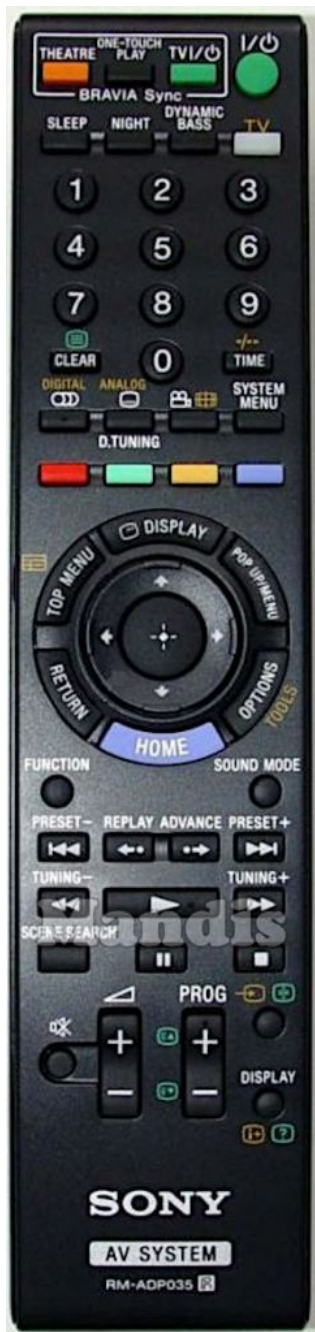Original	Replacement	Original	Replacement
	Tools		Setup / OPT /
	Muting		Mute / Dimmer
	Volume+		Vol+
	Prog+		CH+ / Page+
	Source		AV / Input / RDS
	Volume-		Vol-
	Prog-		CH- / Page-
	[i+]		Info / Angle

