



 







Original	Replacement
 Open / Close	 Eject / Surround
 TV Input	 AV / Input / RDS
 TV Power	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 Vol+	 Vol+
 4	 4
 5	 5
 6	 6
 Vol-	 Vol-
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II

Original	Replacement
 0	 0
 3D	 Shift + 3
 Subtitle	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 SEN	 Smart / List
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up / Menu	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /





Original	Replacement
 Home	 Menu / Home
 <<	 << / Preset-
 ←•	 CH- / Page-
 ←•	 Shift + Left
 •→	 CH+ / Page+
 •→	 Shift + Right
 >>	 >> / Preset+
 <<	 << / Tune-
 ▶	 Play / Slow
 >>	 >> / Tune+
 Display	 Display / Media
	 Pause / Step / Freeze
 ■	 Stop / Hold

Original	Replacement

