



Original	Replacement	Original	Replacement
Guide	Guide / EPG / -/--		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random	I<<	I<< / Preset-
FAV	Fav / Marker / PC	>>I/Index	>>I / Preset+
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Replacement
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	Setup / OPT /
	Rec / Rec Mode
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	Menu / Home
	Audio / Lang I/II
	Up
	Left
	OK
	Right
	Sleep / Timer
	Down





Original	Replacement
Title/Exit	Exit / Cancel / Clear
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	+  Shift + Guide / EPG / -/--

Original	Replacement
0	0
Back	Back / Return
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title

