 

 



 







 


 






 

 

 

 



 

 

 

 





 
 


 

 
 
 



 





 







Original	Replacement
 Standby	 Power
 Open/close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Shift + Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 0	 0
 +10	 Guide / EPG / -/-
 Video	 Shift + 4

Original	Replacement
 Program	 TV/Radio /
 Mute	 Mute / Dimmer
 N/P	 AV / Input / RDS
 Time	 Sleep / Timer
 OSD	 Display / Media
 Setup	 Setup / OPT /
 Up	 Up
 Title	 Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 USB/Card	 Smart / List
 Stop	 Stop / Hold
 Play	 Play / Slow





Original	Replacement
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
A-B	Yellow / YouTube / Repeat
Repeat	Green / APP / Repeat
L/R	Red / Netflix / Search
Slow	Shift + Play /
Vol+	Vol+
Echo+	CH+ / Page+
Mic Vol+	Shift + CH+ /
Mic	Info / Angle
Vol-	Vol-
Echo-	CH- / Page-
Mic Vol-	Shift + CH- /
Zoom	Zoom / Size

Original	Replacement

