


 




 
 


 
 
 

 






| Original | Replacement |
|---|--|
|  Power |  Power |
|  Mute |  Mute |
|  Eject / Nicam |  Eject |
|  Recall / Goto |  Pre Ch |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  TV Menu |  Menu |
|  Source |  AV |
|  Up |  Up |

| Original | Replacement |
|---|--|
|  Right |  Right |
|  Down |  Down |
|  Left |  Left |
|  Enter |  Ok |
|  DVD/DVB Menu |  D. Menu |
|  Exit |  Exit |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  Sound |  Shift + Dual |
|  PIC |  Shift + Format |
|  CH + |  Ch + |
|  CH - |  Ch - |
|  Sleep |  Sleep |
|  Aspect |  Format |
|  Rad / DVD |  Options |
|  Recall / TV |  Back |
|  Text |  Text |





| Original | | Replacement | | Original | | Replacement | |
|----------|-------------------|-------------|----------------|----------|----------|-------------|------|
| | Play/Pause / Info | | Info | | Subtitle | | Subt |
| | Play/Pause / Info | | Play | | | | |
| | Play/Pause / Info | | Pause | | | | |
| | Stop / FAV | + | Shift + Pre Ch | | | | |
| | Stop / FAV | | Stop | | | | |
| | EPG | | Guide | | | | |
| | Red / DVD/USB | | Red | | | | |
| | Green / Title | | Green | | | | |
| | Yellow / PBC | | Yellow | | | | |
| | Blue / Angle | | Blue | | | | |
| | << / Reveal | | << | | | | |
| | >> / Hold | | >> | | | | |
| | I<< / List | | I<< | | | | |
| | >>I / Index | | >>I | | | | |
| | Subpage | | Media | | | | |
| | Display | + | Shift + Info | | | | |
| | Audio | | Dual | | | | |

