




 













Original		Replacement		Original		Replacement	
	Power		Power		TV		TV/R
	1		1		AV		AV
	2		2		Up / P+		Up
	3		3		Up / P+		Ch +
	4		4		Down / P-		Down
	5		5		Down / P-		Ch -
	6		6		Right / V+		Right
	7		7		Right / V+		Vol +
	8		8		Left / V-		Left
	9		9		Left / V-		Vol -
	0		0		Menu		Menu
	Mute		Mute		Menu		Ok
	16:9		Format		S / M / D		Smart
	Red		Red		Recall		Pre Ch
	Green		Green		Recall		Back
	Yellow		Yellow		≡		Text
	Blue		Blue		/≡		Options



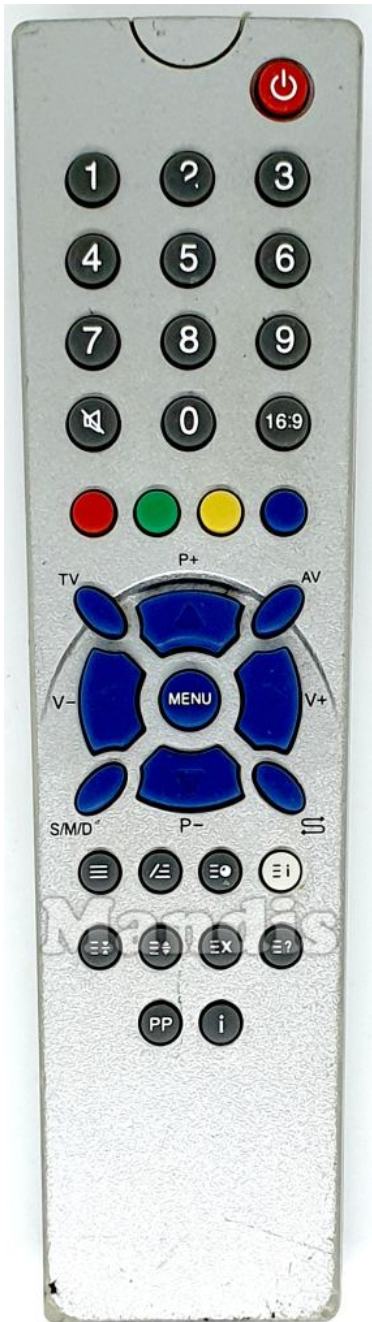

Original	Replacement	Original	Replacement
	≡o		PROG SLEEP Sleep
	≡i		DISPLAY INFO Info
	Hold		Pause
	Size		ZOOM Eject
	≡X		CLEAR EXIT Exit
	≡?		E-MANUAL D.MENU D. Menu
	PP		APP MEDIA Media
	i		SHIFT + DISPLAY INFO Shift + Info

