 



















 

 

 


 
 

 











 
 






 
 
 


 

 
 

 
 
 



 




Original	Replacement	Original	Replacement
 Power	 Power	 EPG	 Shift + Guide
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 FAV+	 Shift + Ch +
 8	 8	 FAV-	 Shift + Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Guide	 Sleep	 Sleep
 Recall	 Back	 P.Mode	 Shift + Format
 Menu	 Menu	 S.Mode	 Shift + Dual
 Exit	 Exit	 FAV	 Pre Ch
 Tv/AV	 AV	 Display	 Info





Original		Replacement		Original		Replacement	
	P.Size		Format		Green		Green
	Nicam/A2		Options		Yellow		Yellow
	Tv/Radio		TV/R		Cyan		Blue
	Text		Text				
	Index		Smart				
	Subtitle		Subt				
	I<</Hold		I<<				
	Audio		Dual				
	>>I/Size		>>I				
	<</Subpage		<<				
	>>/Reveal		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec/PVR		Rec				
	Media		Media				
	Red		Red				

