








 









Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Info	Info / Angle
FAV	Fav / Marker / PC
Page+	Shift + CH+ /
Page-	Shift + CH- /
Audio	Audio / Lang I/II

Original	Replacement
Digest	Setup / OPT /
Menu	Menu / Home
EPG	Guide / EPG / -/-
Exit	Exit / Cancel / Clear
Play	Play / Slow
Zoom	Zoom / Size
Pause	Pause / Step / Freeze
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
UP	Up
Down	Down
Right	Right
Left	Left
OK	OK
CH+	CH+ / Page+





	Original	Replacement	Original	Replacement
		 CH- / Page-		
		 Vol+		
		 Vol-		
		 TV/Radio /		
		 Text / Goto		
		 Subtitle / EQ		
		 Back / Return		
		 Red / Netflix / Search		
		 Green / APP / Repeat		
		 Yellow / YouTube / Repeat		
		 Blue / Prime Video / Random		

