 











 
 





 




 

 

 






 




 

 

 
 

 

 



 

 
 




 
 




Original	Replacement	Original	Replacement
	Power MD		Power
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Tape		Red
	VCR		Smart
	MD		Media
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Stop MD		Stop
	Play MD		Play
	<</ << MD		<<
	>>/>> MD		>>
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	1 MD		1
	2 MD		2
	3 MD		3
	4 MD		4
	5 MD		5
	6 MD		6
	7 MD		7
	8 MD		8
	9 MD		9
	0 MD		0
	>10/-/- MD		Guide



 







 

 




 
 
 







 
 


 


 

 








Original	Replacement
 Tv/AV	 AV
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Power TV	 Shift + Power
 Tv Vol Up	 Shift + Vol +
 Tv Vol Down	 Shift + Vol -
 1 Tv	 Shift + 1
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4
 5 Tv	 Shift + 5

Original	Replacement
 6 Tv	 Shift + 6
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 0 Tv	 Shift + 0
 >10/-/- Tv	 Shift + Guide




 
 

 
 





 





Original	Replacement	Original	Replacement
	Power DVD		Power
	TV		TV/R
	VCR		Smart
	Tuner/Band		Green
	Tape		Red
	MD		Media
	CD		Yellow
	DVD		Blue
	Play DVD		Play
	I<</<< DVD		<<
	Stop DVD		Stop
	>>/>>I DVD		>>
	Top Menu/Disc/Deck		Menu
	Display		Info
	Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6




 

 




 
 
 


	Original	Replacement		Original	Replacement
	7 DVD		7		
	8 DVD		8		
	9 DVD		9		
	0 DVD		0		
	>10/-/- DVD		Guide		
	Vol+		Vol +		
	Vol-		Vol -		
	Muting		Mute		

	Original	Replacement		Original	Replacement



 
 




 
 

 

 



 
 
 

 


 
 

 

 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	TV/R		TV/R
	Smart		Smart
	Yellow		Yellow
	Blue		Blue
	Red		Red
	Media		Media
	Green		Green
	Stop		Stop
	<<		<<
	>>		>>
	Play		Play
	D. Menu		D. Menu
	Info		Info
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	Dual		Dual
	Options		Options
	Subt		Subt
	Back		Back
	Format		Format
	3D		3D
	Ch +		Ch +
	Ch -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Shift + Power		Shift + Power
	Shift + Stop		Shift + Stop
	Shift + Play		Shift + Play



 



 






 







 








 








 
 






 



 



 



 





 






	Original	Replacement	
	<</<< Tape	 + 	Shift + <<
	>>/>> Tape	 + 	Shift + >>
	Top Menu/Disc/Deck	 + 	Shift + Menu
	1 CD-Tape		1
	2 CD-Tape		2
	3 CD-Tape		3
	4 CD-Tape		4
	5 CD-Tape		5
	6 CD-Tape		6
	7 CD-Tape		7
	8 CD-Tape		8
	9 CD-Tape		9
	0 CD-Tape		0
	>10/-/- CD-Tape		Guide
	Direct Tuning/Disc Enter		Text

Original	Replacement




 


 
 



 




 



 





 



 

 



 

 

 
 
 


Original	Replacement	Original	Replacement
 Power VCR	 Power	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu
 5 VCR	 5	 Display	 Info





Original	Replacement
 Menu	 D. Menu
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6
 7 Tuner/Band	 Shift + 7

Original	Replacement
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0
 ≥10/--	 Shift + Guide

