 

 































 



 

 





 



 















 





 



























Original	Replacement
 Power Receiver	 Power
 Tuner	 Shift + 6
 CD	 Shift + 3
 VCR	 Shift + 4
 TV	 Shift + 1
 Tape Monitor	 Shift + 5
 Disc	 OK
 Direct Tuning	 Smart / List
 1 Tuner	 1
 2 Tuner	 2
 3 Tuner	 3
 4 Tuner	 4
 5 Tuner	 5
 6 Tuner	 6
 7 Tuner	 7
 8 Tuner	 8
 9 Tuner	 9

Original	Replacement
 0 Tuner	 0
 ≥10 / -/- Tuner	 Guide / EPG / -/-
 Muting	 Mute / Dimmer
 Volume -	 Vol-
 Volume +	 Vol+





	Original	Replacement		Original	Replacement
	Power Receiver	 Power		0 CD	 0
	Tuner	 Shift + 6		≥10 / - / - CD	 Guide / EPG / - / -
	CD	 Shift + 3		Fast Reverse CD	 << / Tune-
	VCR	 Shift + 4		Fast Forward CD	 >> / Preset+
	TV	 Shift + 1		Stop CD	 Stop / Hold
	Tape Monitor	 Shift + 5		Play CD	 Play / Slow
	Disc	 OK		Muting	 Mute / Dimmer
	Direct Tuning	 Smart / List		Volume -	 Vol-
	1 CD	 1		Volume +	 Vol+
	2 CD	 2			
	3 CD	 3			
	4 CD	 4			
	5 CD	 5			
	6 CD	 6			
	7 CD	 7			
	8 CD	 8			
	9 CD	 9			

