



 

 




 








 

 

 
























Original	Replacement
 Digital	 Display / Media
 Yellow/Theater Modes/Info	 Yellow / YouTube / Repeat
 Power	 Power
 Tv	 Shift + 1
 DVD	 Shift + 2
 Green/Stereo/[...]	 Green / APP / Repeat
 Blue/Delay/Title	 Blue / Prime Video / Random
 Red/Center/Audio	 Red / Netflix / Search
 Up	 Up
 Violet/Level/Came	 Fav / Marker / PC
 Tape	 Shift + 5
 SAT/CAB	 Shift + 0
 Tuner	 Shift + 6
 Video/VCR	 Shift + 4
 Left/-	 Left
 OK	 OK
 Right/+	 Right

Original	Replacement
 PTY	 Text / Goto
 Down	 Down
 Menu/RDS	 Menu / Home
 Vol+	 Vol+
 PR+ />>I	 CH+ / Page+
 Vol-	 Vol-
 PR- /I<<	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Replacement		Original		Replacement	
	Memo / Clear		Smart / List				
	0		0				







 







 









Original	Replacement
Digital	Display / Media
Yellow/Theater Modes/Info	Yellow / YouTube / Repeat
Power	Power
TV	Shift + 1
DVD	Shift + 2
Green/Stereo/[...]	Green / APP / Repeat
Blue/Delay/Title	Blue / Prime Video / Random
Red/Center/Audio	Red / Netflix / Search
Up	Up
Violet/Level/Came	Fav / Marker / PC
Tape	Shift + 5
SAT/CAB	Shift + 0
Tuner	Shift + 6
Video/VCR	Shift + 4
Left/-	Left
OK	OK
Right/+	Right

Original	Replacement
Down	Down
Menu/RDS	Menu / Home
Vol+	Vol+
PR+ />>I	>>I / Preset+
PR+ />>I	CH+ / Page+
Vol-	Vol-
PR- /I<<	I<< / Preset-
PR- /I<<	CH- / Page-
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8







 

 

 




 
 




 


 



 

 







	Original	Replacement		Original	Replacement
	9	 9			
	Memo/Clear	 Smart / List			
	0	 0			
	<<	 << / Tune-			
	Play	 Play / Slow			
	>>	 >> / Tune+			
	Rec	 Rec / Rec Mode			
	Stop	 Stop / Hold			
	Pause	 Pause / Step / Freeze			

 







 



 












 







	Original	Replacement







Original	Replacement
 Digital	 Display / Media
 Yellow/Theater Modes/Info	 Yellow / YouTube / Repeat
 Power	 Power
 TV	 Shift + 1
 DVD	 Shift + 2
 Green/Stereo/[...]	 Green / APP / Repeat
 Blue/Delay/Title	 Blue / Prime Video / Random
 Red/Center/Audio	 Red / Netflix / Search
 Up	 Up
 Violet/Level/Came	 Fav / Marker / PC
 Tape	 Shift + 5
 SAT/CAB	 Shift + 0
 Tuner	 Shift + 6
 Video/VCR	 Shift + 4
 Left/-	 Left
 OK	 OK
 Right/+	 Right

Original	Replacement
 PTY	 Text / Goto
 Down	 Down
 Menu/RDS	 Menu / Home
 Vol+	 Vol+
 PR+ />>I	 CH+ / Page+
 Vol-	 Vol-
 PR- /I<<	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9







 

 




 







 


 













 

 

 

 





 

 

 

 

 







 





	Original	Replacement	Original	Replacement
	Memo/Clear	Smart / List		
	0	0		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		







Original	Replacement
 Digital	 Display / Media
 Yellow/Theater Modes/Info	 Yellow / YouTube / Repeat
 Power	 Power
 Tv	 Shift + 1
 DVD	 Shift + 2
 Green/Stereo/[...]	 Green / APP / Repeat
 Blue/Delay/Title	 Blue / Prime Video / Random
 Red/Center/Audio	 Audio / Lang I/II
 Red/Center/Audio	 Red / Netflix / Search
 Up	 Up
 Violet/Camera/Le	 Fav / Marker / PC
 Tape	 Shift + 5
 SAT/CAB	 Shift + 0
 Tuner	 Shift + 6
 Video/VCR	 Shift + 4
 Left/-	 Left
 OK	 OK

Original	Replacement
 Right/+	 Right
 PTY	 Text / Goto
 Down	 Down
 Menu/RDS	 Menu / Home
 Menu/RDS	 AV / Input / RDS
 Vol+	 Vol+
 PR+ />>I	 CH+ / Page+
 PR+ />>I	 >>I / Preset+
 Vol-	 Vol-
 PR-/I<<	 CH- / Page-
 PR-/I<<	 I<< / Preset-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement	Original	Replacement
	6	6		
	7	7		
	8	8		
	9	9		
	Memo/Clear	Smart / List		
	0	0		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		

