

 
 
 
 
 


 
 











 
 
 



 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 P+	 Ch +
 7	 7	 P-	 Ch -
 8	 8	 Mute	 Mute
 9	 9	 i	 Info
 0	 0	 Exit	 Exit
 ↔	 Pre Ch	 Source	 AV
 Back	 Back	 Q.Menu	 D. Menu
 Menu	 Menu	 EPG	 Guide
 Netflix	 Media	 TXT	 Text
 Internet	 Smart	 *	 Format
 Ok	 Ok	 */Q	 3D





Original	Replacement	Original	Replacement
 [>]	 Options		
 Lang	 Dual		
 Subt.	 Subt		
 Shift + Format	 Shift + Format		
 TV	 TV/R		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		

