



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Lang	 Audio / Lang I/II
 Source (Games)	 Eject / Surround
 Movie-Music-Phot	 Picture / Format
 [≡]..	 Zoom / Size
 */O	 Sleep / Timer
 TV	 TV/Radio /
 Q.Menu	 D.Menu / Top
 [-O-]	 Setup / OPT /
 [≡]/Text	 Text / Goto

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 BACK	 Back / Return
 Vol+	 Vol+
 World (Violet)	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 */Q	 Display / Media
 PR-	 CH- / Page-
 1./@	 1
 2abc	 2





	Original	Replacement	Original	Replacement
	3	 CO - STB 3		
	4	 VIDEO 4		
	5	 TAPE 5		
	6	 TUNER 6		
	7	 AUX - HDD 7		
	8	 USB 8		
	9	 BLUETOOTH 9		
	Guide	 GUIDE EPG		
	0	 HDMI - BAT 0		
	Red	 NETFLIX SEARCH		
	Green	 APP REPEAT		
	Yellow	 YouTube REPEAT A-B		
	Blue	 Prime Video RANDOM		
	Recall	 SHIFT + RETURN BACK		

