





 





 















 


 




 



 



 





 





 

 

 











Original		Replacement		Original		Replacement	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		Audio		Audio / Lang I/II
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		Aspect		Shift + Picture / Format
	4		4		CH -		CH- / Page-
	5		5		EPG / Set		Guide / EPG / -/-
	6		6		Home		Shift + Menu / Home
	7		7		APP		Shift + Green / APP / Repeat
	8		8		Menu		Menu / Home
	9		9		Up		Up
	List		Smart / List		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	Picture		Picture / Format		Right		Right
	Sound		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original		Replacement		Original		Replacement	
	Info		Info / Angle		Hold / Refresh	+	Shift + Stop /
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	<< / Index		<< / Tune-				
	Play/Pause /		Play / Slow				
	>> / TTX		Text / Goto				
	>> / TTX		>> / Tune+				
	l<< / Sub.Pg		l<< / Preset-				
	>>l / Reveal		>>l / Preset+				
	Stop / Mix		Stop / Hold				
	Capture		Display / Media				
	Subtitle		Subtitle / EQ				
	Freeze		Pause / Step / Freeze				
	FAV		Fav / Marker / PC				
	Size / Mouse		Zoom / Size				

