



 





 

 



 

 

 

 





 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Green	 Green / APP / Repeat
 Mute	 Mute / Dimmer	 Sub	 Subtitle / EQ
 Stop	 Stop / Hold	 Yellow	 Yellow / YouTube / Repeat
 Play	 Play / Slow	 Sleep	 Sleep / Timer
 Pause	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-	 Timer	 Shift + Sleep / Timer
 >>	 >> / Tune+	 Menu	 Menu / Home
 Rec	 Rec / Rec Mode	 i	 Info / Angle
 USB	 Shift + 8	 Up	 Up
 I<<	 I<< / Preset-	 Left	 Left
 >>I	 >>I / Preset+	 OK	 OK
 Help	 Smart / List	 Right	 Right
 FAV	 Shift + Fav / Marker / PC	 Exit	 Exit / Cancel / Clear
 Audio	 Audio / Lang I/II	 Down	 Down
 Option	 Setup / OPT /	 Back	 Back / Return
 Red	 Red / Netflix / Search	 Vol+	 Vol+
 TTX	 Text / Goto	 EPG	 Guide / EPG / -/-





	Original	Replacement		Original	Replacement
	CH+	 CH+ / Page+			
	Vol-	 Vol-			
	List	 Shift + Smart / List			
	CH-	 CH- / Page-			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	Tv/Radio	 TV/Radio /			
	0	 0			
	Recall	 Fav / Marker / PC			

	Original	Replacement

