



Original	Replacement
	Power
	Vol+
	CH+ / Page+
	Vol-
	Mute / Dimmer
	Back / Return
	CH- / Page-
	Exit / Cancel / Clear
	Up
	Menu / Home
	Left
	OK
	Right
	Down
	Text / Goto
	Red / Netflix / Search
	Green / APP / Repeat

Original	Replacement
	Yellow / YouTube / Repeat
	Info / Angle
	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9
	AV / Input / RDS
	Setup / OPT /
	<< / Tune-
	Play / Slow
	>> / Tune+





Original	Replacement	Original	Replacement
	Power		Yellow
	Vol+		Info
	PR+		Blue/[]
	Vol-		1
	Mute		2
	Back		3
	PR-		4
	Exit		5
	Up		6
	Menu		7
	Left/Zoom-		8
	OK		9
	Right/Zoom+		AV
	Down		SP/LP
	Text		<<
	Red/[o]		Play
	Green/Timer/List		>>
			Yellow / YouTube / Repeat
			Info / Angle
			Blue / Prime Video / Random
			1
			2
			3
			4
			5
			6
			7
			8
			9
			AV / Input / RDS
			Setup / OPT /
			<< / Tune-
			Play / Slow
			>> / Tune+





Original	Replacement	Original	Replacement
	Power		Yellow / YouTube / Repeat
	Vol+		Info / Angle
	CH+ / Page+		Blue / Prime Video / Random
	Vol-		1
	Mute / Dimmer		2
	Back / Return		3
	CH- / Page-		4
	Exit / Cancel / Clear		5
	Up		6
	Menu / Home		7
	Left		8
	OK		9
	Right		AV / Input / RDS
	Down		0
	Text / Goto		Setup / OPT /
	Red / Netflix / Search		<< / Tune-
	Green / APP / Repeat		Play / Slow



