



Original	Replacement
 STANDBY/ON	 Power
 OPEN/CLOSE	 Eject / Surround
 SETUP	 Setup / OPT /
 MUTE	 Mute / Dimmer
 REPEAT	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 SHUFFLE	 Blue / Prime Video / Random
 SLEEP	 Sleep / Timer
 DISPLAY	 Display / Media
 TOP	 Back / Return
 MENU/PBC	 Menu / Home
 SUBTITLE	 Subtitle / EQ
 AUDIO	 Audio / Lang I/II
 ZOOM	 Zoom / Size
 ANGLE	 Info / Angle
 Up	 Up
 Down	 Down

Original	Replacement
 Left	 Left
 Right	 Right
 ENTER	 OK
 I> SLOW/PROG	 Shift + >>I / Preset+
 PLAY	 Play / Slow
 PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 I<< PRESET	 I<< / Preset-
 >>I PRESET	 >>I / Preset+
 << TUNNING	 << / Tune-
 >> TUNNING	 >> / Tune+
 TIMER	 Shift + Sleep / Timer
 SOURCE	 AV / Input / RDS
 CM SKIP	 Shift + Display / Media
 STEP	 Shift + Pause / Step /
 1	 1
 2	 2





Original		Replacement		Original		Replacement	
	3		3		CH+		CH+ / Page+
	4		4		VOL-		Vol-
	5		5		VOL+		Vol+
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	SEARCH		Red / Netflix / Search				
	SURROUND		Shift + Eject / Surround				
	CLEAR		Exit / Cancel / Clear				
	EDIT		Text / Goto				
	SELECT		Shift + OK				
	EQ		Shift + Subtitle / EQ				
	RECORD		Rec / Rec Mode				
	REC MODE		Shift + Rec / Rec Mode				
	CH-		CH- / Page-				

