



 

 















 

 





 









 


 


 



 


 

Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 -/--	 Shift + Guide / EPG / -/--
 9	 9
 0	 0

Original	Replacement
 Recall	 Back / Return
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Tv/Radio	 TV/Radio /
 Guide	 Guide / EPG / -/--
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Source	 AV / Input / RDS
 Up	 Up
 Aspect	 Shift + Picture / Format





Original	Replacement
	 Left
	 OK
	 Right
	 Display / Media
	 Down
	 Exit / Cancel / Clear
	 Text / Goto
	 Rec / Rec Mode
	 Info / Angle
	 Shift + Stop /
	 Eject / Surround
	 Subtitle / EQ
	 Setup / OPT /
	 CH+ / Page+
	 Zoom / Size
	 Vol-
	 Menu / Home

Original	Replacement
	 Vol+
	 Shift + Exit / Cancel / Clear
	 CH- / Page-
	 Smart / List
	 Fav / Marker / PC
	 D.Menu / Top
	 Shift + Display / Media

