



 

 

 


 
 

 


 
 

 
 








 
 
 











 







 





 


 








Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -	 Shift + Guide
 Recall	 Pre Ch
 Nicam / A2	 Shift + Dual
 Aspect	 Format
 P Mode	 Shift + Format

Original	Replacement
 S Mode	 Dual
 Display	 Info
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Freeze	 Shift + Pause
 Source	 AV
 Media	 Media
 Text	 Text
 Sleep	 Sleep
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu





Original	Replacement
 Exit	 Exit
 Red / Open/Close	 Red
 Red / Open/Close	 Shift + Exit
 Green /	 Green
 Green /	 D. Menu
 Yellow /	 Yellow
 Yellow /	 Options
 Blue / A-B	 Blue
 Blue / A-B	 Back
 Hold / DTV/Radio	 Shift + Stop
 Hold / DTV/Radio	 TV/R
 Reveal / PVR.List	 Smart
 Size / Rec	 Rec
 Size / Rec	 3D
 Index / Guide	 Shift + Info
 Index / Guide	 Guide
 Subtitle	 Subt

Original	Replacement
 S.Page / CH.List	 Shift + Subt
 S.Page / CH.List	 List
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 Fav / <<	 <<
 Fav / <<	 Shift + Pre Ch
 >>	 >>
 I<< / Time Shift	 I<<
 >>I	 >>I

