 

 



 

 





 

 

 







 



 



 



 



 











 



 



 



 





Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Prog-	 CH- / Page-
 Input Select	 AV / Input / RDS	 Clear	 Exit / Cancel / Clear
 HDMI	 Shift + 0	 [i+]/Info	 Info / Angle
 Power	 Power	 Text	 Text / Goto
 1	 1	 Variable Replay	 Picture / Format
 2	 2	 Variable Skip	 Zoom / Size
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Top Menu	 Shift + D.Menu / Top Menu
 5	 5	 Disc Menu	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter/OK	 OK
 9	 9	 Right	 Right
 0	 0	 Display	 Display / Media
 Timer Prog	 Sleep / Timer	 Down	 Down
 Setup	 Setup / OPT /	 Return	 Back / Return
 Prog+	 CH+ / Page+	 Red	 Red / Netflix / Search





Original		Replacement		Original		Replacement	
	Green		Green / APP / Repeat		Subtitle		Subtitle / EQ
	Yellow/Mode		Yellow / YouTube / Repeat		O)))/Audio		Audio / Lang I/II
	Blue/Search		Blue / Prime Video / Random		SAT Link		Smart / List
	<</REV		<< / Tune-				
	Play		Play / Slow				
	>>/FWD		>> / Tune+				
	I<< Skip		I<< / Preset-				
	Stop		Stop / Hold				
	>>I Skip		>>I / Preset+				
	Pause		Pause / Step / Freeze				
	VCR		Shift + 4				
	HDD		Shift + 7				
	DVD		Shift + 2				
	Time Slip		TV/Radio /				
	Dubbing		Sound / Title				
	Rec Mode		Shift + Rec / Rec Mode				
	Rec		Rec / Rec Mode				

