

 







 

 





 











 



 



 














 
 



 
 


 



 








| Original   | Replacement  | Original  | Replacement  |
|--|--|---|--|
|  Open/Close   |  Eject / Surround |  0               |  0                        |
|  Input Select |  AV / Input / RDS |  Clear           |  Exit / Cancel / Clear    |
|  HDMI         |  Shift + 0        |  [i+]/Info       |  Info / Angle             |
|  Standby      |  Power            |  Text            |  Text / Goto              |
|  1            |  1                |  Variable Replay |  Vol+                     |
|  2            |  2                |  Variable Skip   |  Vol-                     |
|  3            |  3                |  Guide           |  Guide / EPG / -/--       |
|  Prog+        |  CH+ / Page+      |  Top Menu        |  D.Menu / Top             |
|  4            |  4                |  Disc Menu       |  Menu / Home              |
|  5            |  5                |  Up              |  Up                       |
|  6           |  6               |  Left           |  Left                    |
|  Prog-      |  CH- / Page-    |  Enter         |  OK                     |
|  7          |  7              |  Right         |  Right                  |
|  8          |  8              |  Display       |  Display / Media        |
|  9          |  9              |  Down          |  Down                   |
|  Timer Prog |  Sleep / Timer  |  Return        |  Back / Return          |
|  Setup      |  Setup / OPT /  |  Red           |  Red / Netflix / Search |





| Original  | Replacement   | Original  | Replacement   |
|---|---|---|---|
|  Green       |  Green / APP / Repeat        |  Rec           |  Rec / Rec Mode    |
|  Yellow/Mode |  Yellow / YouTube / Repeat   |  Subtitle      |  Subtitle / EQ     |
|  Blue/Search |  Blue / Prime Video / Random |  1.3x/0.8x PLY |  Shift + Play /    |
|  Blue/Search |  Shift + Red / Netflix /     |  O)/Audio      |  Audio / Lang I/II |
|  <<          |  << / Tune-                  |  Sat Link      |  Smart / List      |
|  Play        |  Play / Slow                 |   |   |
|  >>          |  >> / Tune+                  |   |   |
|  I<<         |  I<< / Preset-               |   |   |
|  Stop        |  Stop / Hold                 |   |   |
|  >>I         |  >>I / Preset+               |   |   |
|  Pause      |  Pause / Step / Freeze      |   |   |
|  VCR       |  Shift + 4                 |   |   |
|  HDD       |  Shift + 7                 |   |   |
|  DVD       |  Shift + 2                 |   |   |
|  Time Slip |  TV/Radio /                |   |   |
|  Dubbing   |  Picture / Format          |   |   |
|  Rec Mode  |  Shift + Rec / Rec Mode    |   |   |

