

 

 
 


 

 

 
 
 


 
 

 

 

 

 

 
 













 

 
 



 

 






 
 

 

 

 


 
 


 


 





 

 
 


 


 

 


 


 


 
 






Original	Replacement	Original	Replacement
	Power		Power
	Eject		Eject
	Tv/Disc		TV/R
	ATV/DTV		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AD		Shift + Subt
	Input		AV
	Mute		Mute
	Quick		Pre Ch
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Pop Up Menu		D. Menu
	Top Menu		Shift + Menu
	Guide/Disc		Guide
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu/Set Up		Menu
	Return		Back
	Pause		Pause





Original		Replacement		Original		Replacement	
	Play		Play		O)/ I		Dual
	Stop		Stop		[≡ ]/[i+]		Info
	I<< Skip		I<<		Angle		Rec
	<< Rev		<<				
	>> FF		>>				
	Skip >>I (Slow)		>>I				
	Red/Program		Red				
	Green/Digest		Green				
	Yellow/Zoom		Yellow				
	Blue/Book Mark		Blue				
	[≡?]		Media				
	[≡+]		Format				
	[≡◆]		3D				
	[≡o]/[≡x]		Sleep				
	[▼]		Options				
	Text		Text				
	Subtitle		Subt				

