










 




































 





















 

 







 


 


 




 






Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Slow I>	 CH+ / Page+
 Power	 Power	 Camera/Angle	 Info / Angle
 1	 1	 [...] / Subtitle	 Subtitle / EQ
 2	 2	 O))) / Audio	 Audio / Lang I/II
 3	 3	 Pause/Step	 Pause / Step / Freeze
 4	 4	 Play	 Play / Slow
 5	 5	 Stop	 Stop / Hold
 6	 6	 I<< Skip	 I<< / Preset-
 7	 7	 << / REV	 << / Tune-
 8	 8	 FWD / >>	 >> / Tune+
 9	 9	 Skip >>I	 >>I / Preset+
 10	 Guide / EPG / -/-	 Up	 Up
 0	 0	 Left	 Left
 T/Search	 Red / Netflix / Search	 Enter	 OK
 EPM	 Picture / Format	 Right	 Right
 EAM	 Sound / Title	 Top Menu	 D.Menu / Top
 Mute	 CH- / Page-	 Down	 Down





Original	Replacement	Original	Replacement
	Menu		Menu / Home
	Clear		Exit / Cancel / Clear
	Display		Display / Media
	Navi		Smart / List
	Return		Back / Return
	Memory		Fav / Marker / PC
	Play Mode		Shift + Play /
	A-B RPT		Yellow / YouTube / Repeat
	PBC		Blue / Prime Video / Random
	Setup		Setup / OPT /
	Video Out		Text / Goto
	HDMI		Shift + 0
	Zoom		Zoom / Size

