 
 



 





 





| Original | Replacement |
|--|--|
|  Open/Close |  Eject / Surround |
|  Input Select |  AV / Input / RDS |
|  Standby |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Prog+ |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Prog- |  CH- / Page- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Timer Prog |  Sleep / Timer |
|  Setup |  Setup / OPT / |
|  0 |  0 |

| Original | Replacement |
|---|--|
|  Clear |  Exit / Cancel / Clear |
|  [i+]/Info |  Info / Angle |
|  Text |  Text / Goto |
|  Variable Replay |  Vol+ |
|  Variable Skip |  Vol- |
|  Guide |  Guide / EPG / -/- |
|  Top Menu |  D.Menu / Top |
|  Up |  Up |
|  Disc Menu |  Menu / Home |
|  Left |  Left |
|  Enter / OK |  OK |
|  Right |  Right |
|  Display |  Display / Media |
|  Down |  Down |
|  Return |  Back / Return |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |





| Original | | Replacement | | Original | | Replacement | |
|----------|-----------|-------------|-----------------------------|----------|----------|-------------|-------------------|
| | Yellow | | Yellow / YouTube / Repeat | | O)/Audio | | Audio / Lang I/II |
| | Blue | | Blue / Prime Video / Random | | Sat Link | | Smart / List |
| | << | | << / Tune- | | | | |
| | Play | | Play / Slow | | | | |
| | >> | | >> / Tune+ | | | | |
| | I<< | | I<< / Preset- | | | | |
| | Stop | | Stop / Hold | | | | |
| | >>I | | >>I / Preset+ | | | | |
| | Pause | | Pause / Step / Freeze | | | | |
| | HDD | | Shift + 7 | | | | |
| | DVD | | Shift + 2 | | | | |
| | Time Slip | | TV/Radio / | | | | |
| | Dubbing | | Picture / Format | | | | |
| | Rec Mode | | Shift + Rec / Rec Mode | | | | |
| | Rec | | Rec / Rec Mode | | | | |
| | Subtitle | | Subtitle / EQ | | | | |
| | AD | | Sound / Title | | | | |

